

**Ford Wildtrak**  
 Mountain Top Roll  
 Installation Instructions



Model Year: 2011 →  
 Part Number: MTR FO90 H01 Double cab (DC)  
 MTR FO91 H01 Super cab (SC)



Weight: 31 / 36 kg



Installation Time: 2 hr







MTI-number 886 012	Issue 05	Date 16/04/2012	A66SX-19501A34-BA A66SX-26501A34-CA	AB39 21501A42 AA AB39-26501A42-AA	Page 1 /24
Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk					

# Ford Wildtrak


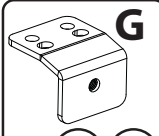










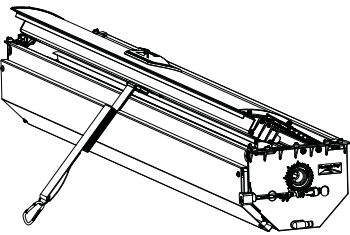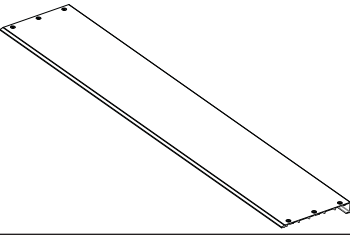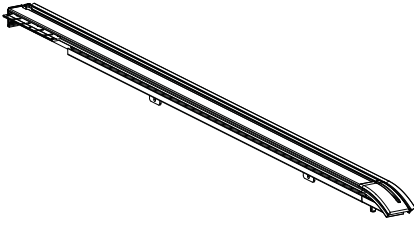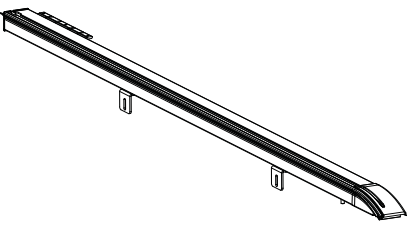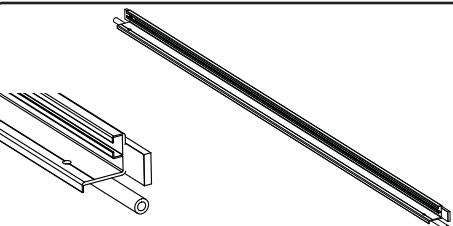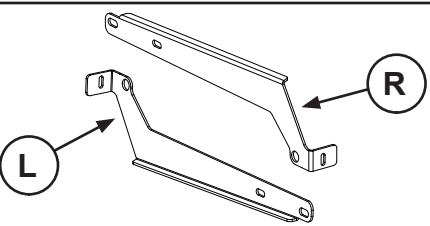







## Mountain Top Roll

### Installation Instructions




 <b>A</b> x 1	 <b>B</b> x 1
 <b>C</b> x 1	 <b>D</b> x 1
 <b>E</b> x 1	 <b>F</b> x 2














  

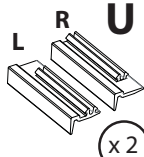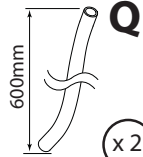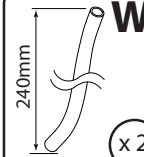 Kit DC SC	 <b>G</b> x 6 SC x 4 DC	 <b>H</b> x 2	 <b>I</b> M6x12 x 6 SC x 4 DC	 <b>J</b> Ø6 x 10 SC x 8 DC	 <b>K</b> M6 x 2	 Installation Manual x 1
 <b>L</b> M6x12 x 4	 <b>M</b> M6x25 x 2	 <b>N</b> M5x6 x 6	 <b>O</b> x 6	 <b>P</b> x 6	 TÜV x 1	
 <b>X</b> M6x25 x 2	 <b>R</b> x 4	 <b>S</b> x 2	 <b>T</b> x 2	 <b>U</b> x 2	 <b>Q</b> 600mm x 2	 <b>W</b> 240mm x 2

 <b>V</b> x 1
---

**Ford Wildtrak**  
**Mountain Top Roll**  
**Installation Instructions**

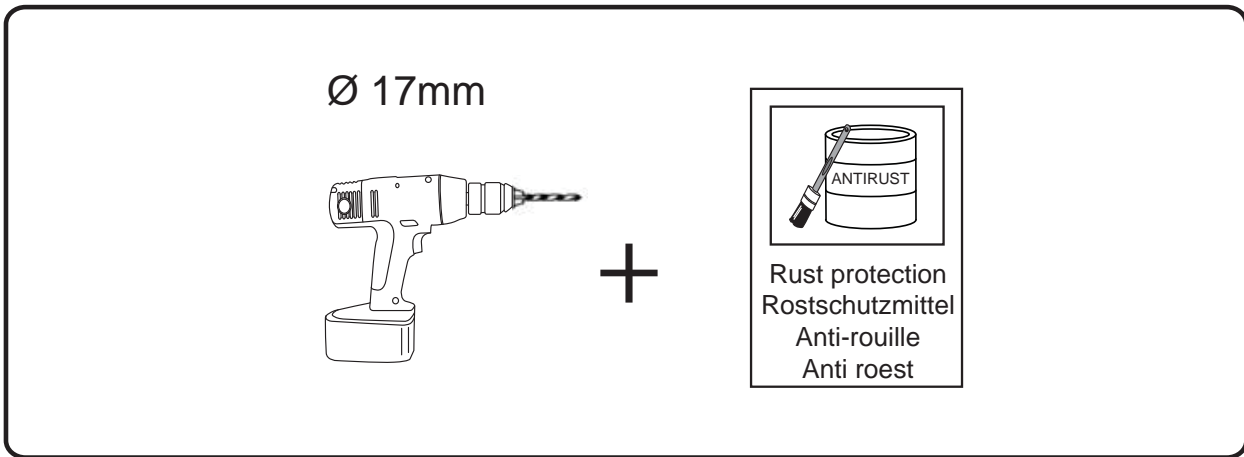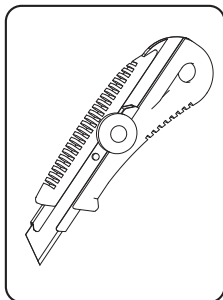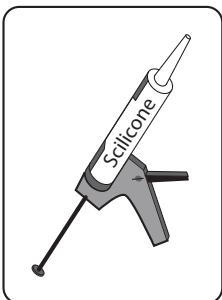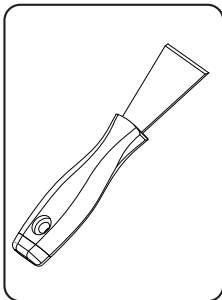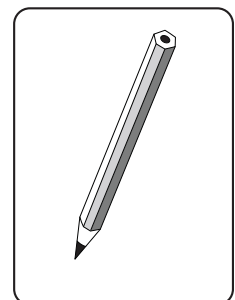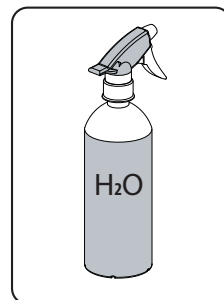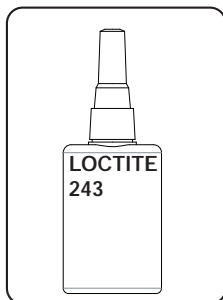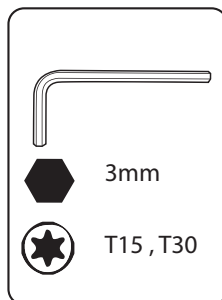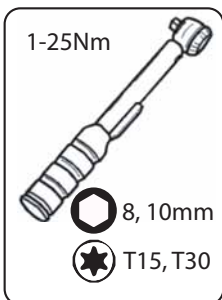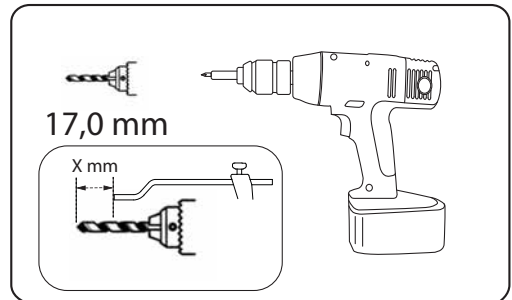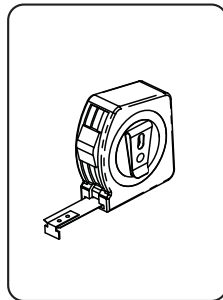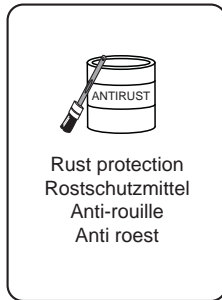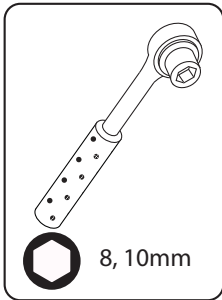


MTI-number 886 012	Issue 05	Date 16/04/2012	A66SX-19501A34-BA A66SX-26501A34-CA	AB39 21501A42 AA AB39-26501A42-AA	Page 3 /24
Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk					

# Ford Wildtrak

## Mountain Top Roll

### Installation Instructions


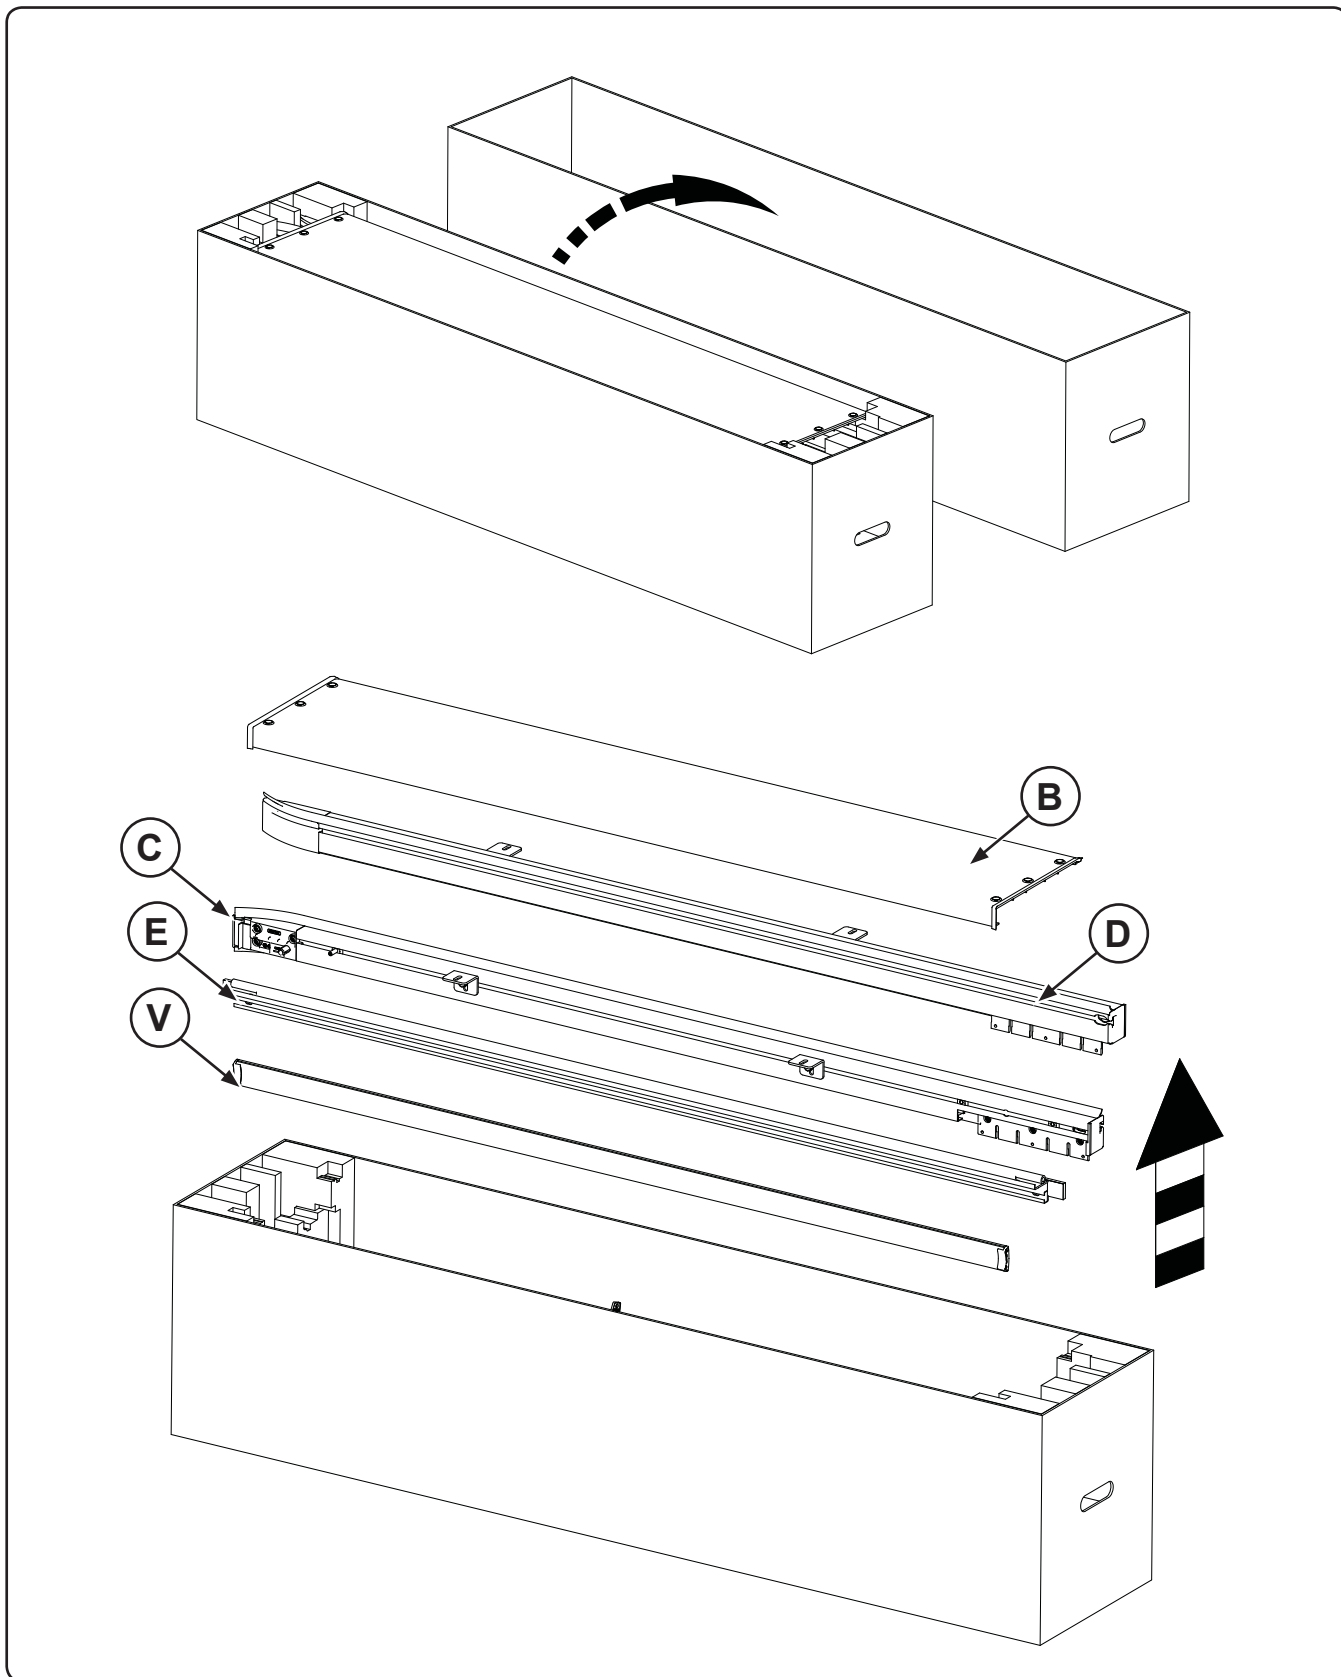


MTI-number 886 012	Issue 05	Date 16/04/2012	A66SX-19501A34-BA A66SX-26501A34-CA	AB39 21501A42 AA AB39-26501A42-AA	Page 4 /24
Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk					


# Ford Wildtrak

## Mountain Top Roll


### Installation Instructions

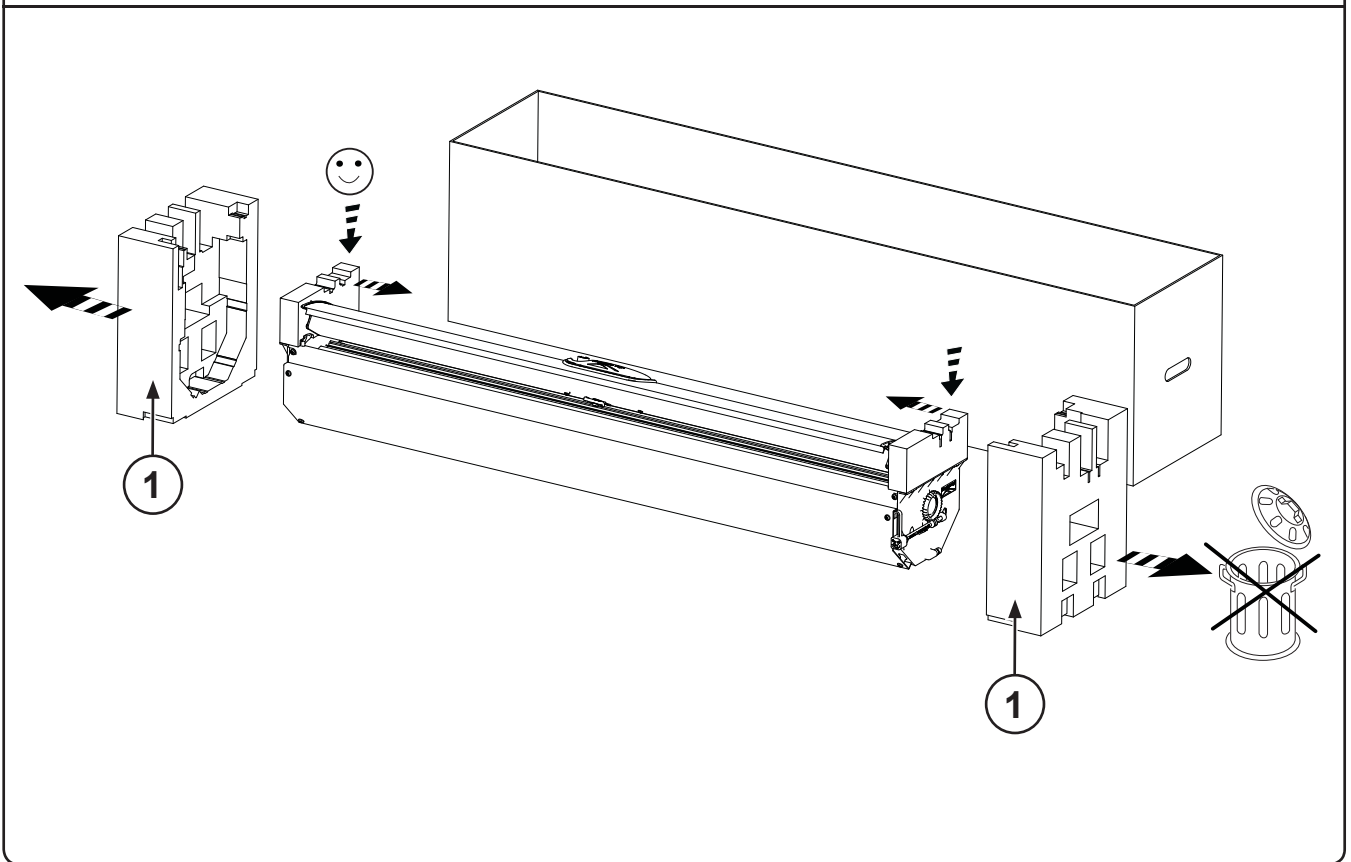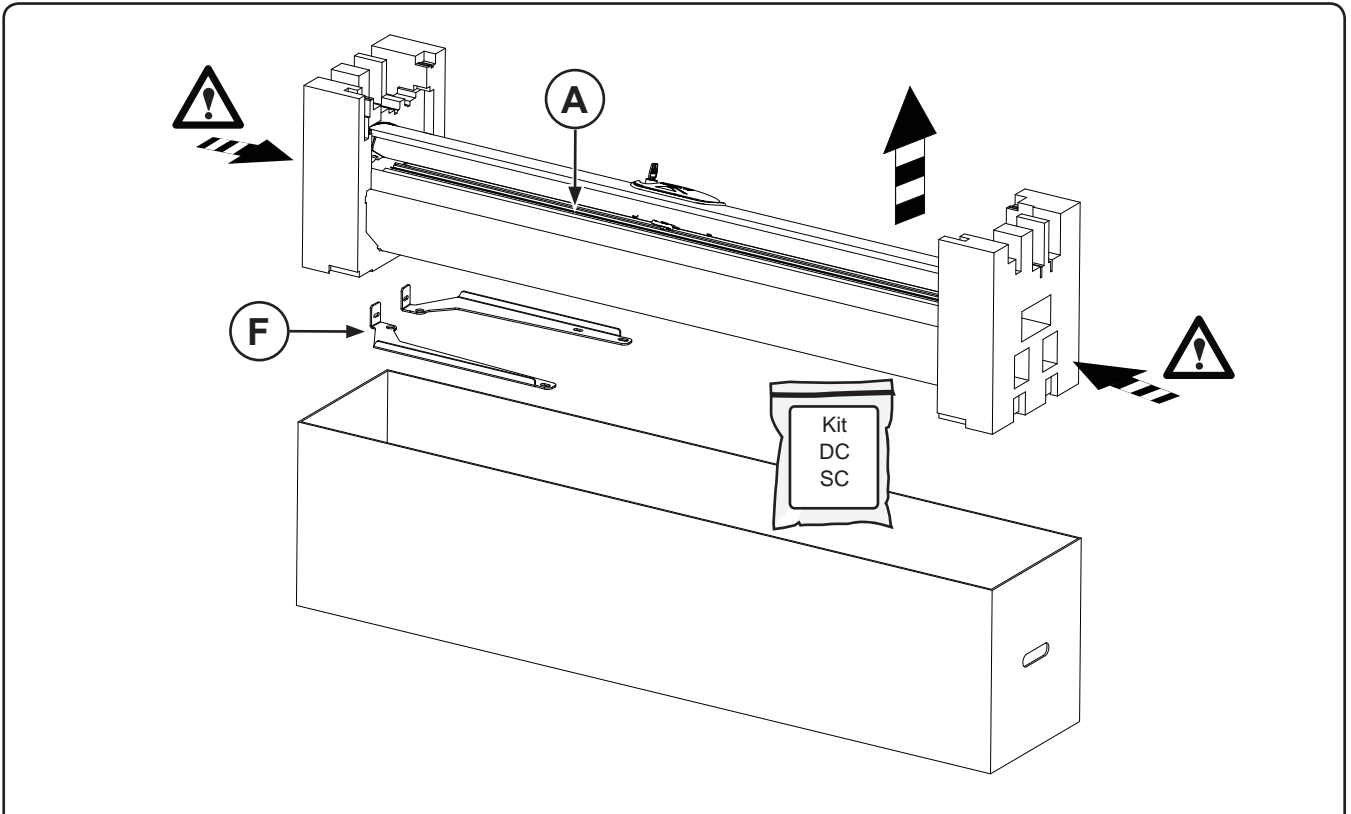


**Ford Wildtrak**  
 Mountain Top Roll  
 Installation Instructions

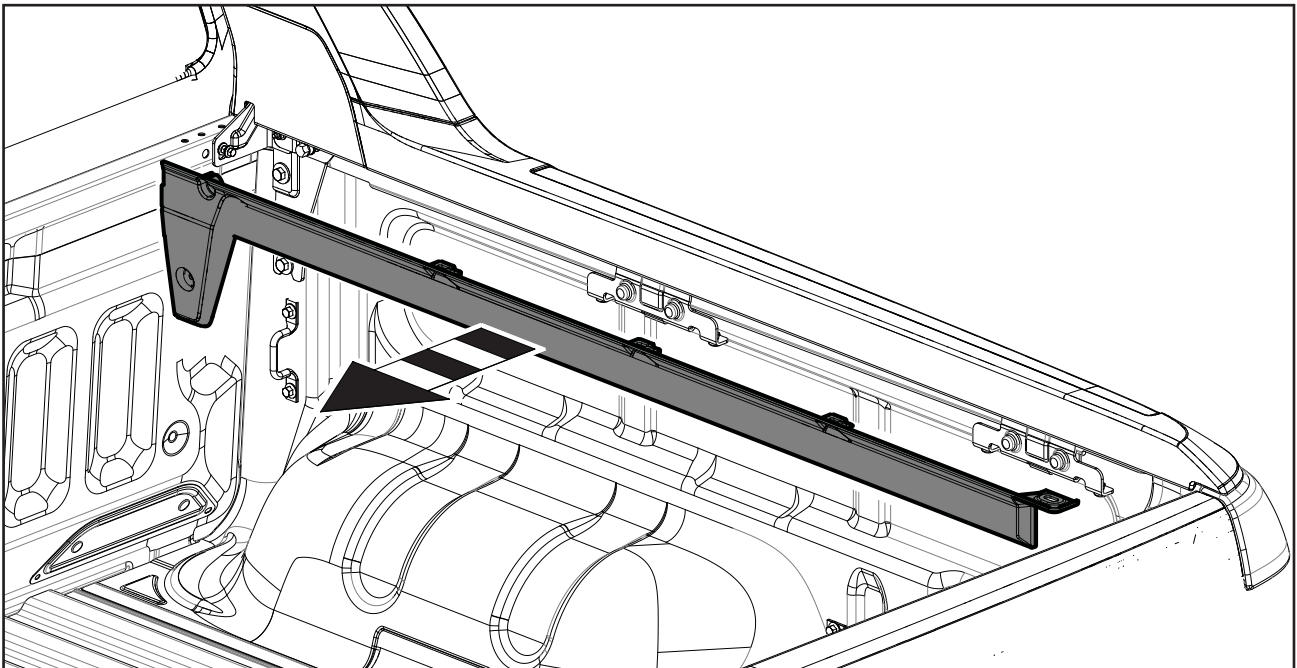

**Double Cab**

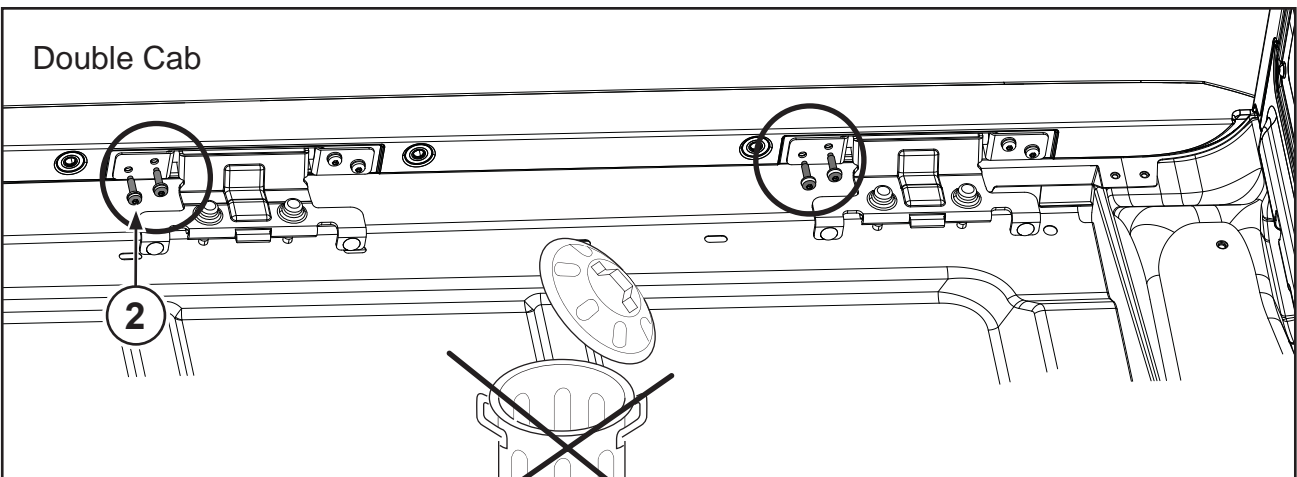


**Super Cab**

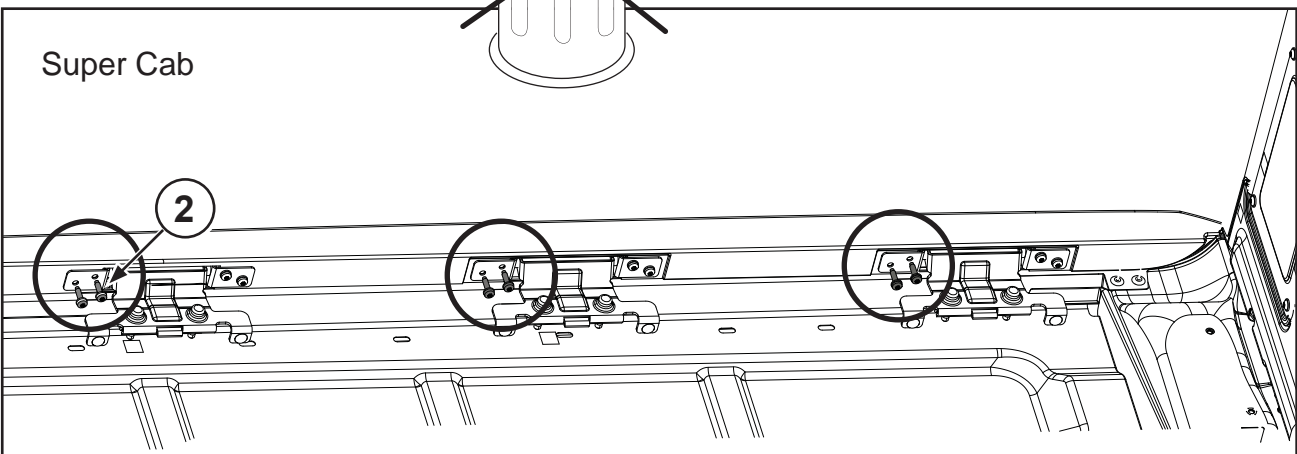

MTI-number 886 012	Issue 05	Date 16/04/2012	A66SX-19501A34-BA A66SX-26501A34-CA	AB39 21501A42 AA AB39-26501A42-AA	Page 6 /24
Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk					

**Ford Wildtrak**  
 Mountain Top Roll  
 Installation Instructions


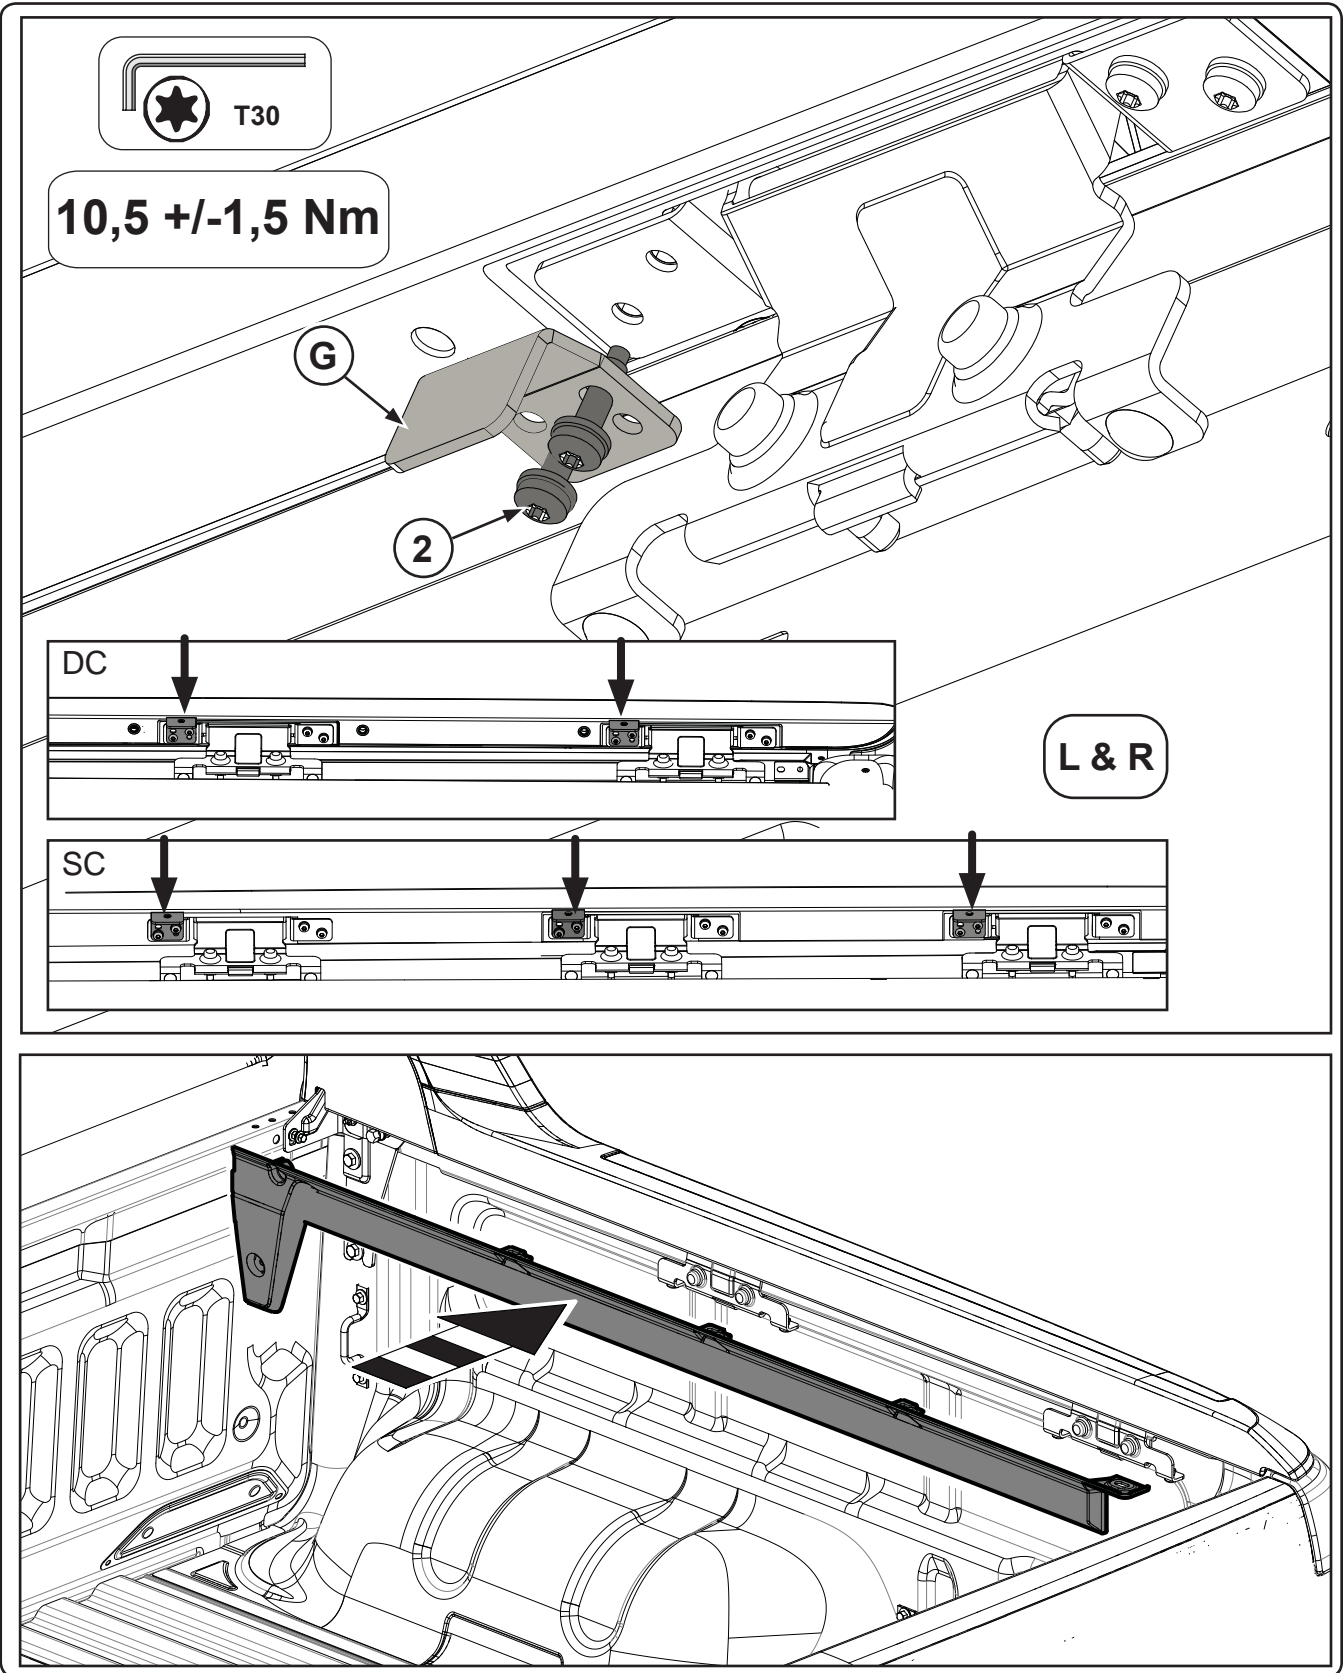


MTI-number 886 012	Issue 05	Date 16/04/2012	A66SX-19501A34-BA A66SX-26501A34-CA	AB39 21501A42 AA AB39-26501A42-AA	Page 7 /24
Pedersholmparken 10 3600 Frederikssund Denmark			ph: +45 4810 2950	Fax +45 4810 2960	www.mountaintop.dk

# Ford Wildtrak

## Mountain Top Roll

### Installation Instructions

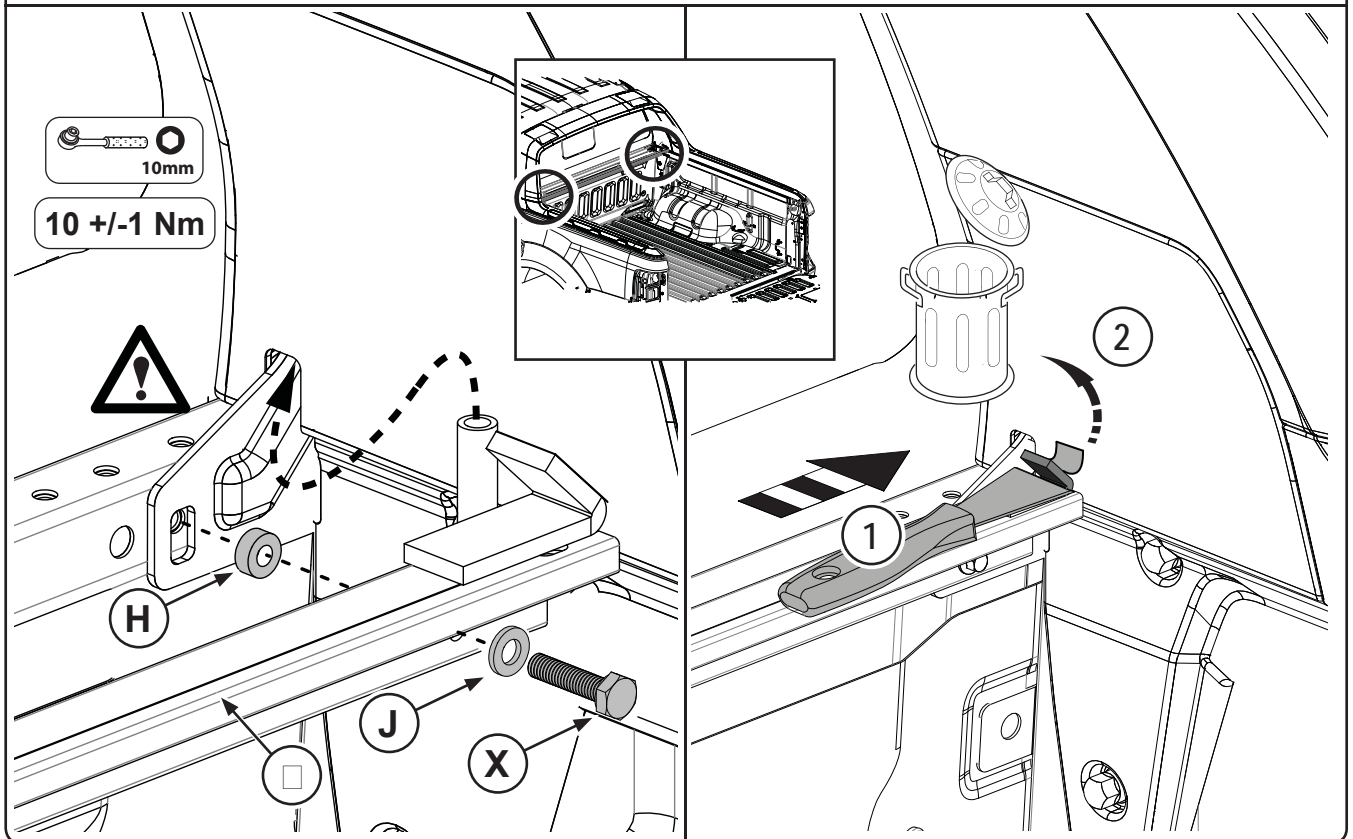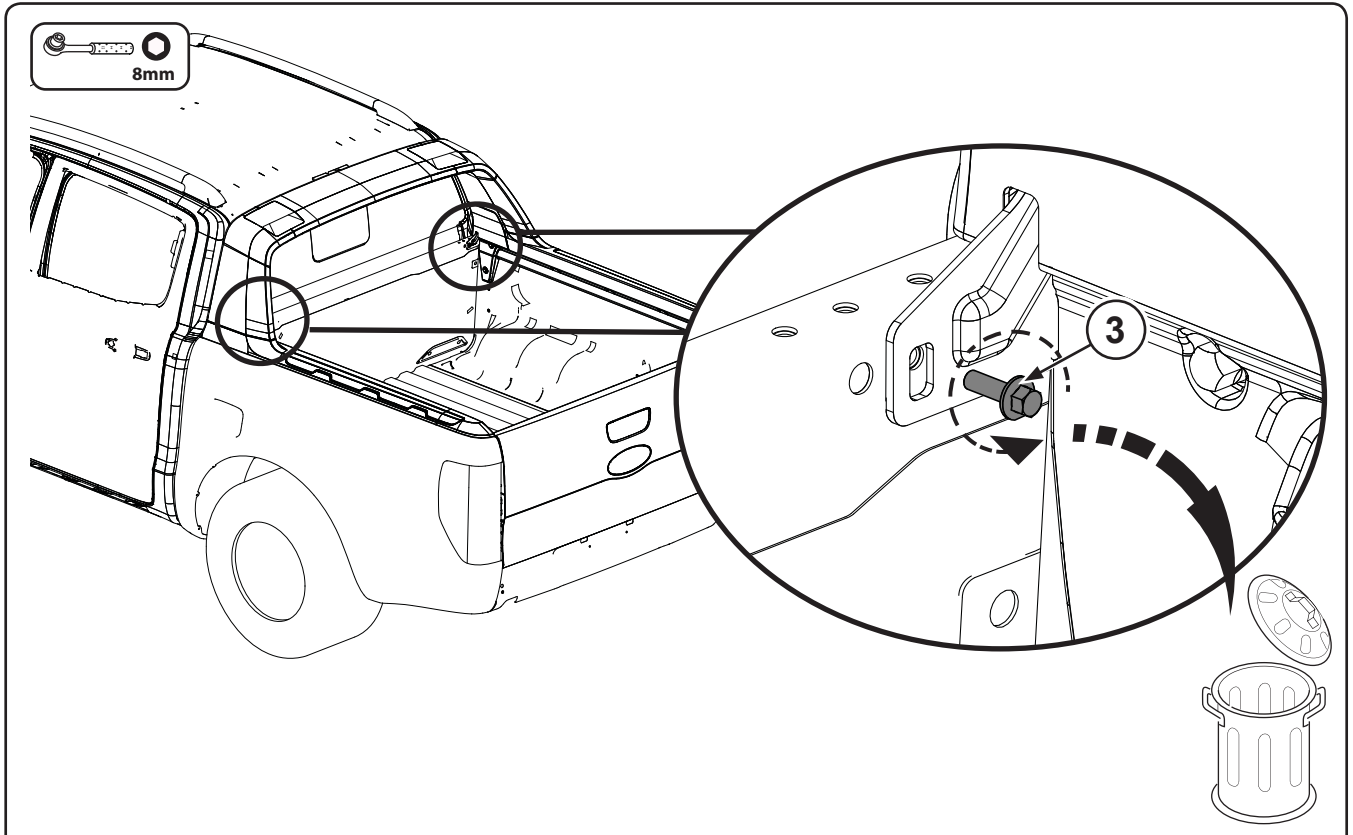





MTI-number 886 012	Issue 05	Date 16/04/2012	A66SX-19501A34-BA A66SX-26501A34-CA	AB39 21501A42 AA AB39-26501A42-AA	Page 8 /24
Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk					



# Ford Wildtrak



## Mountain Top Roll

### Installation Instructions

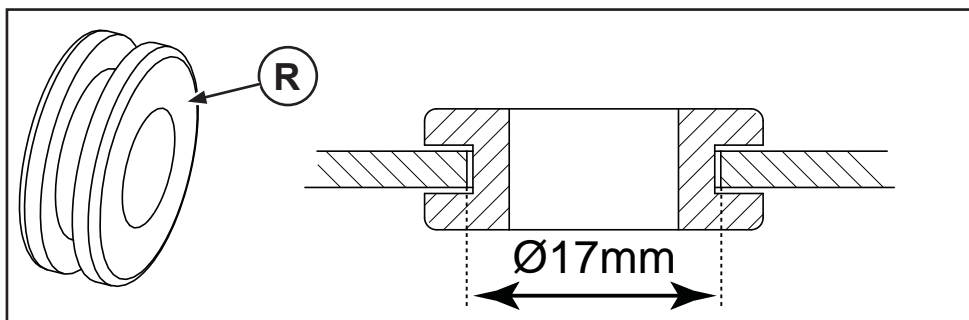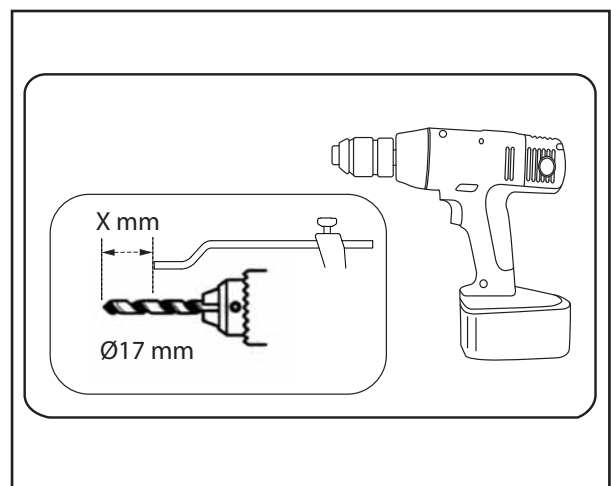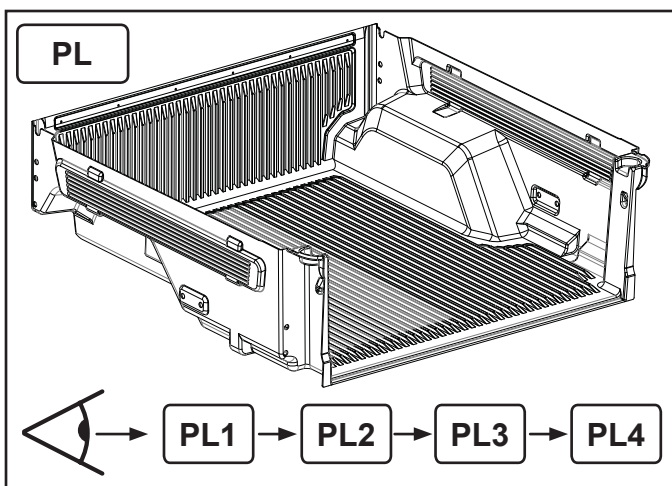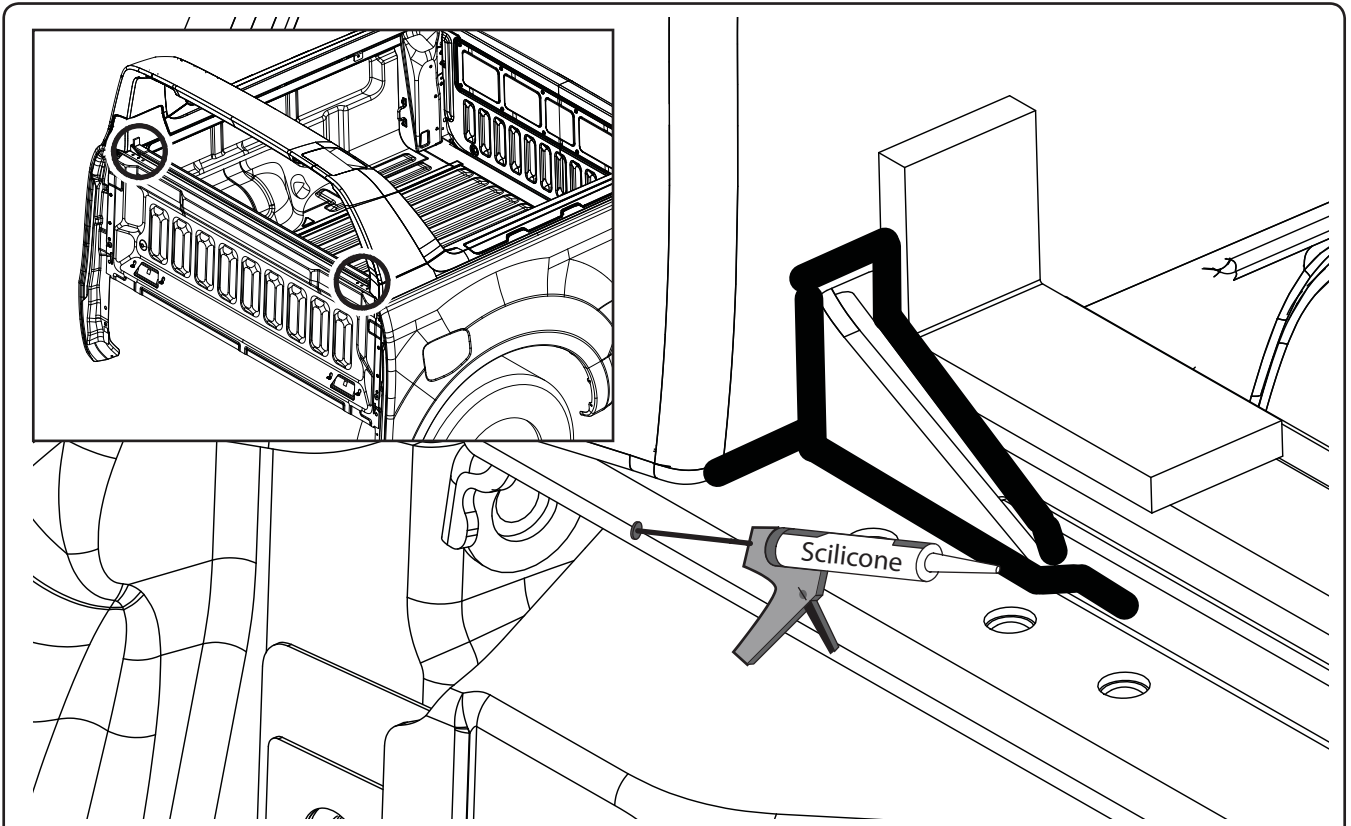

MTI-number 886 012	Issue 05	Date 16/04/2012	A66SX-19501A34-BA A66SX-26501A34-CA	AB39 21501A42 AA AB39-26501A42-AA	Page 9 /24
Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk					

**Ford Wildtrak**  
 Mountain Top Roll  
 Installation Instructions

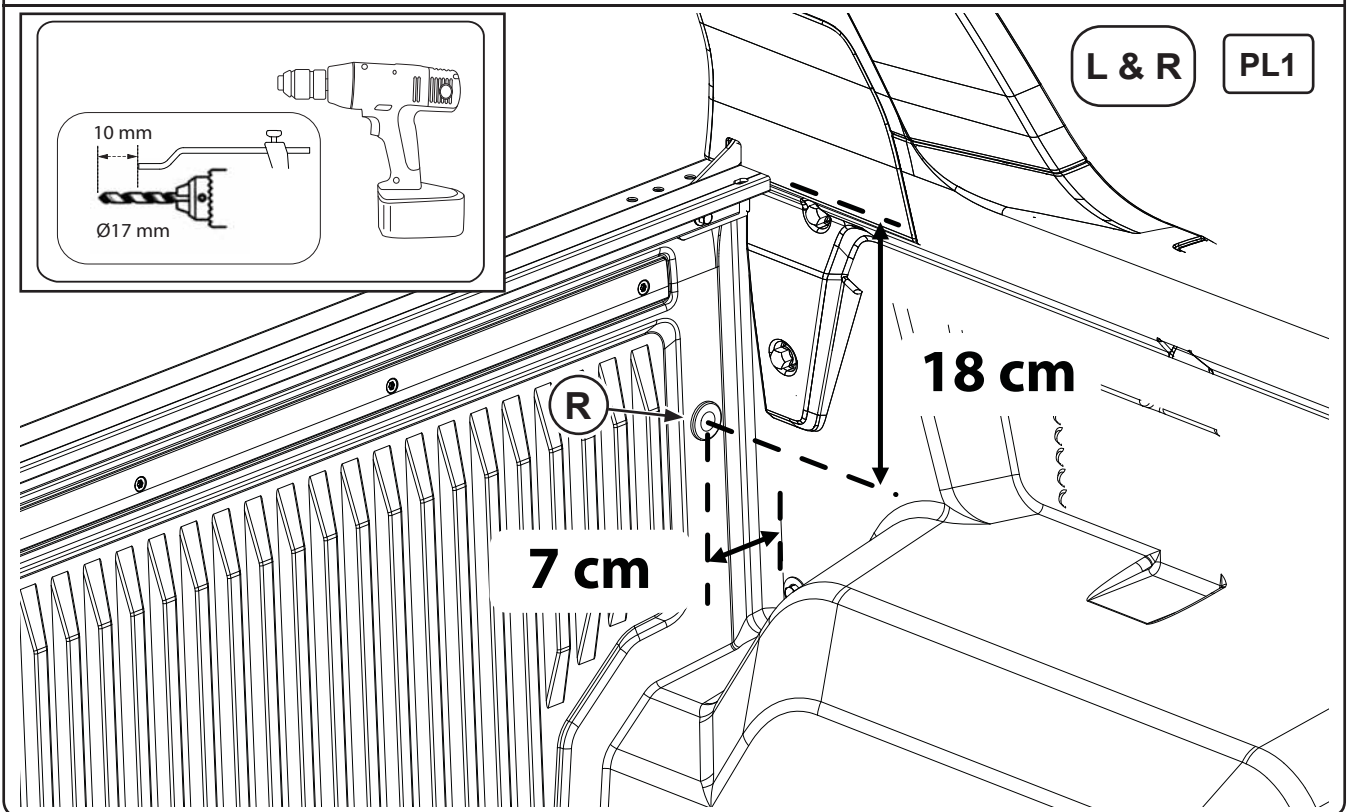
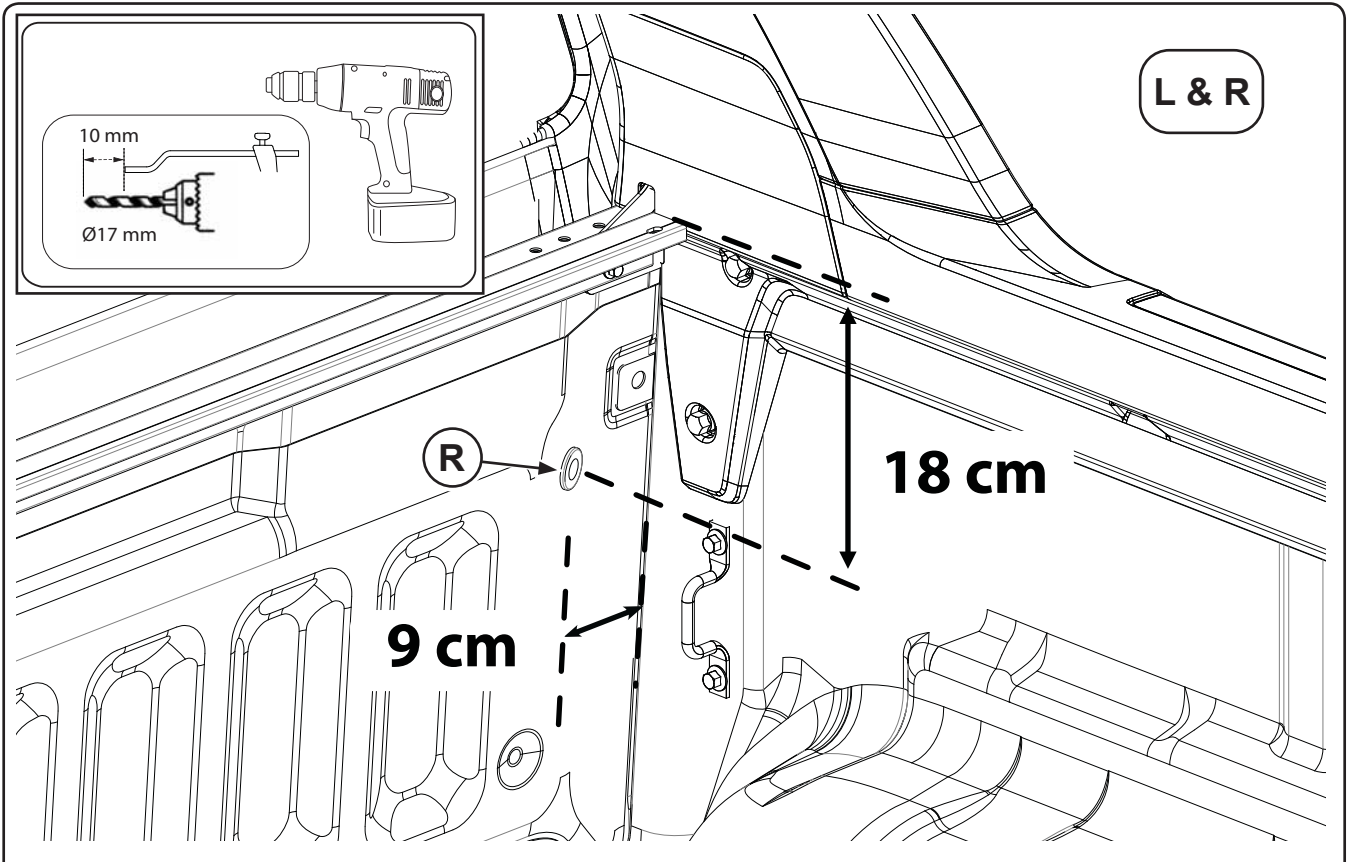


MTI-number 886 012	Issue 05	Date 16/04/2012	A66SX-19501A34-BA A66SX-26501A34-CA	AB39 21501A42 AA AB39-26501A42-AA	Page 10/24
Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960			www.mountaintop.dk		

# Ford Wildtrak



## Mountain Top Roll

### Installation Instructions

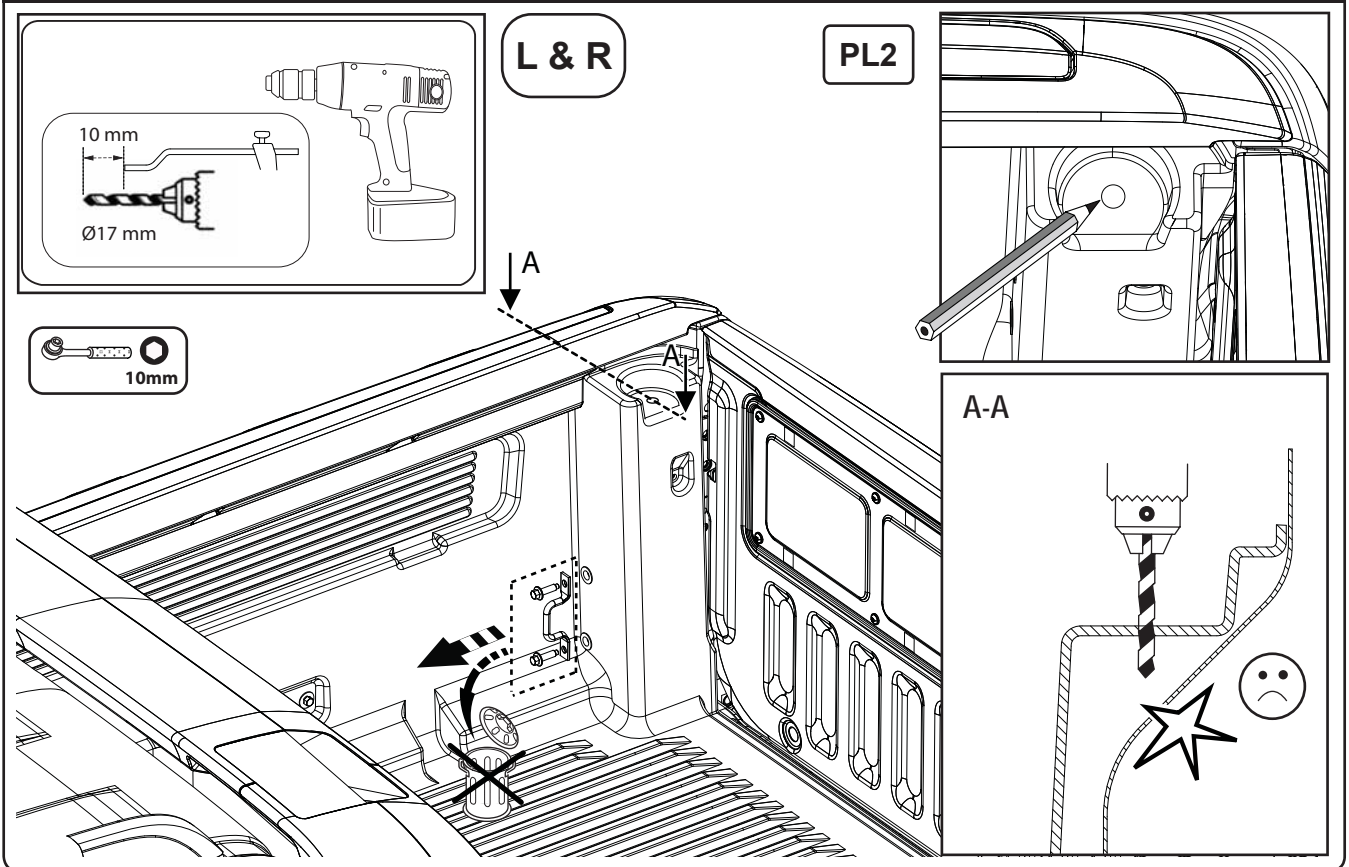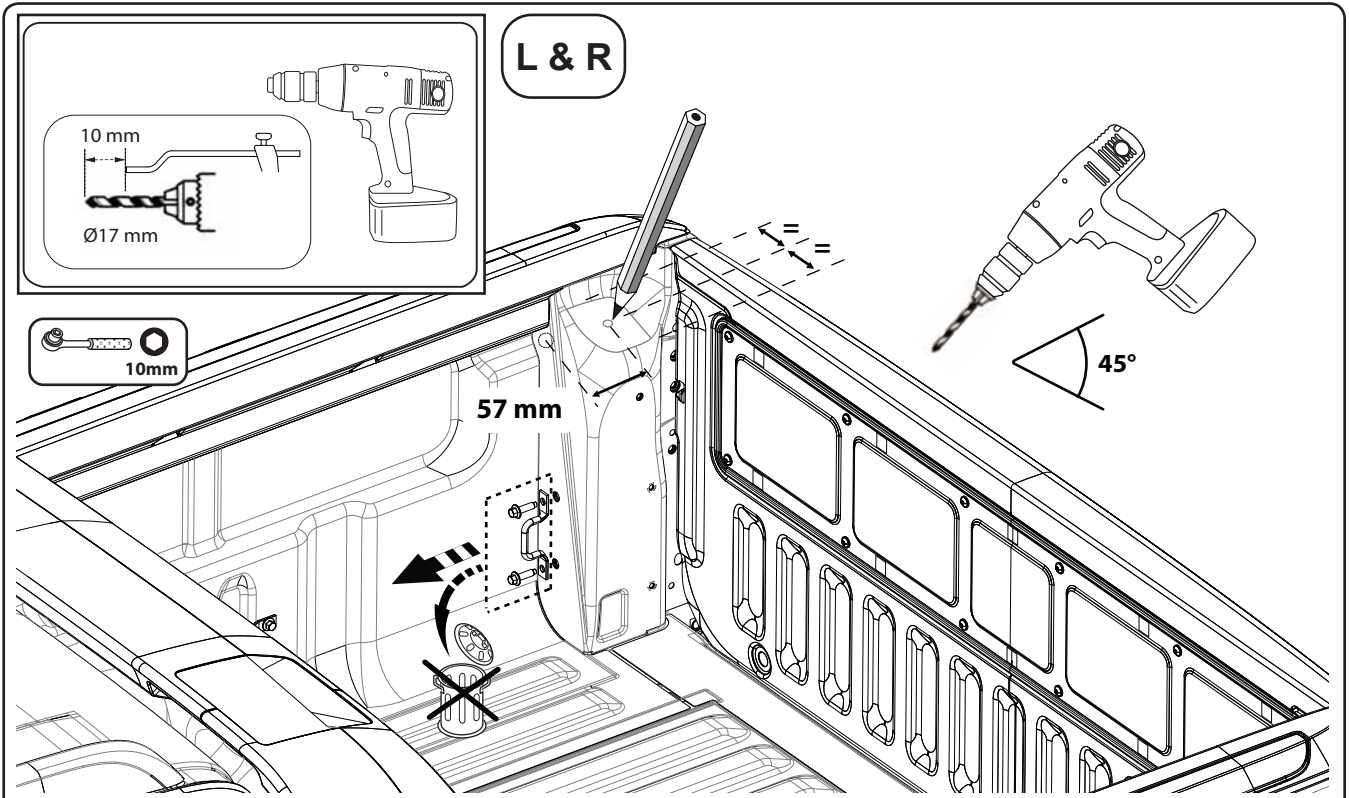

MTI-number 886 012	Issue 05	Date 16/04/2012	A66SX-19501A34-BA A66SX-26501A34-CA	AB39 21501A42 AA AB39-26501A42-AA	Page 11/24
Pedersholmparken 10 3600 Frederikssund Denmark ph: +45 4810 2950 Fax +45 4810 2960 www.mountaintop.dk					

**Ford Wildtrak**  
 Mountain Top Roll  
 Installation Instructions

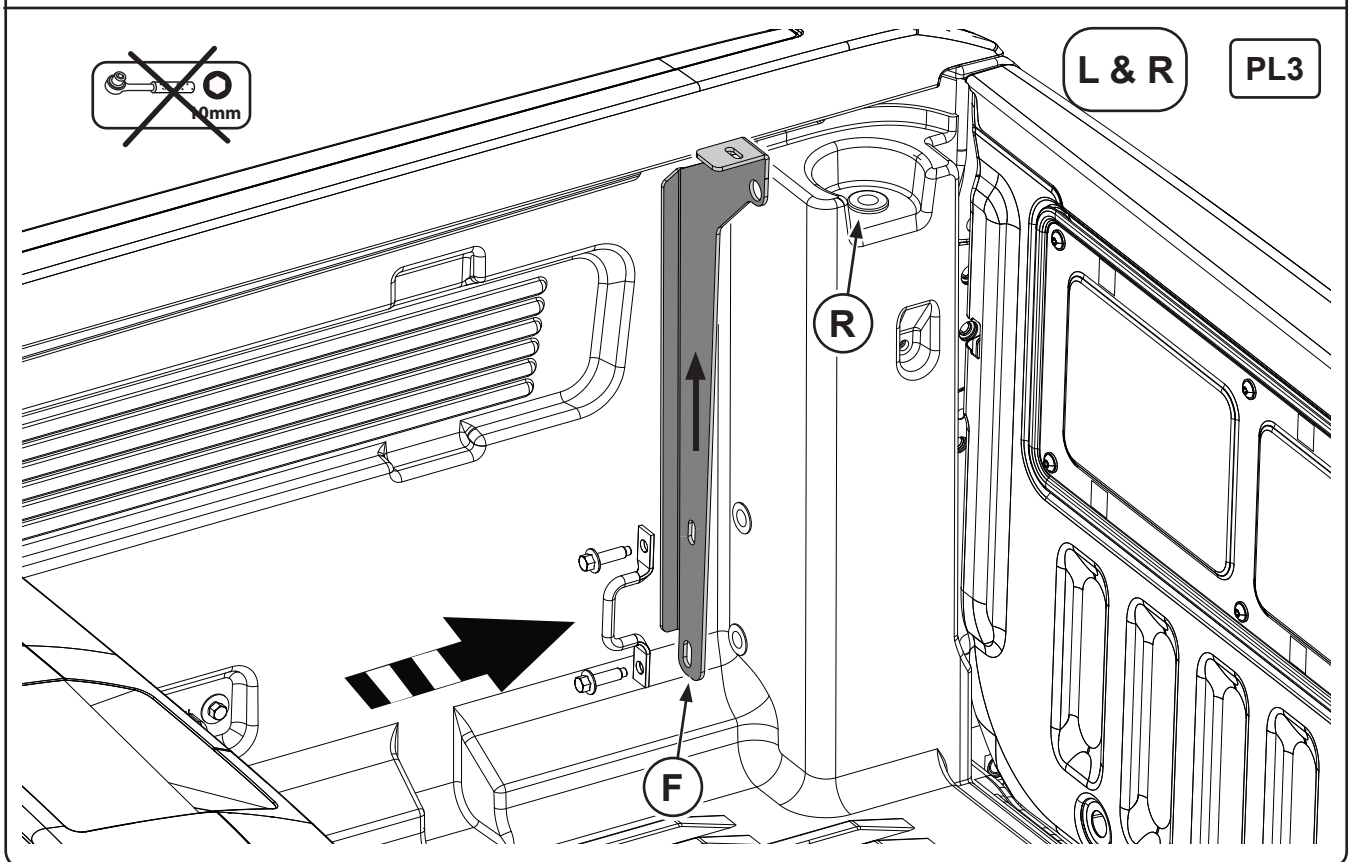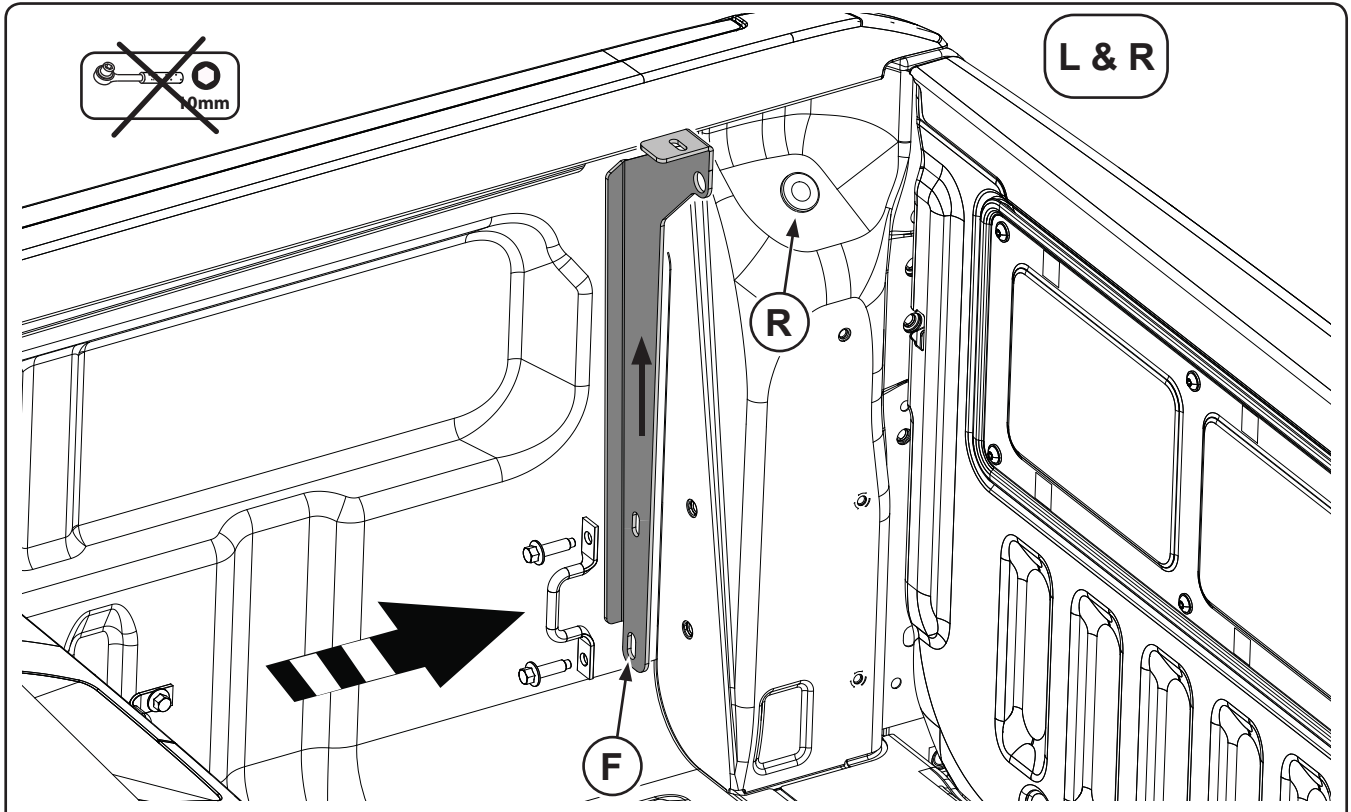

MTI-number 886 012	Issue 05	Date 16/04/2012	A66SX-19501A34-BA A66SX-26501A34-CA	AB39 21501A42 AA AB39-26501A42-AA	Page 12/24
Pedersholmparken 10 3600 Frederikssund Denmark			ph: +45 4810 2950	Fax +45 4810 2960	www.mountaintop.dk