






Thule XT Kit 3140

> Instructions

FORD Transit Courier, 4-dr Van, 14-

This kit is only for vehicles with fixpoint mounting.

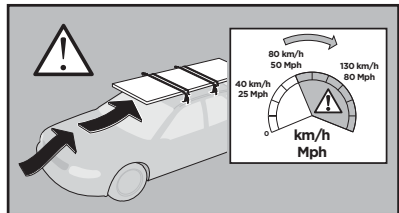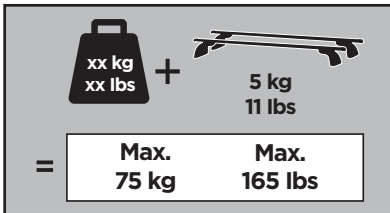
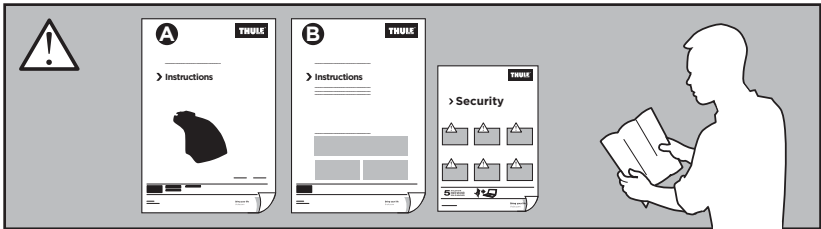


ISO 11154-E


183140

C.20141210
509-3140-01




Bring your life
thule.com

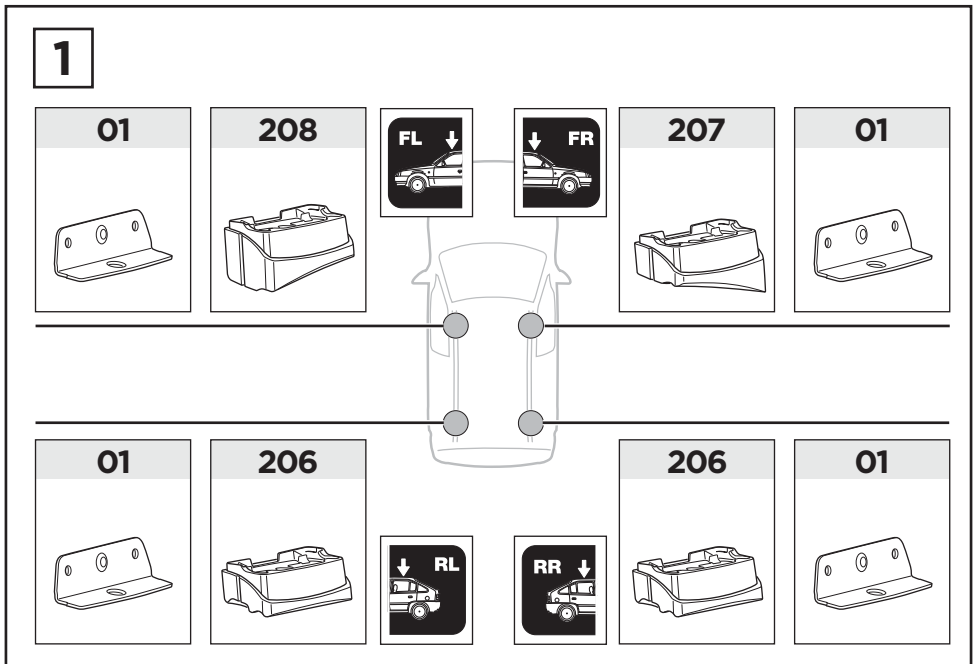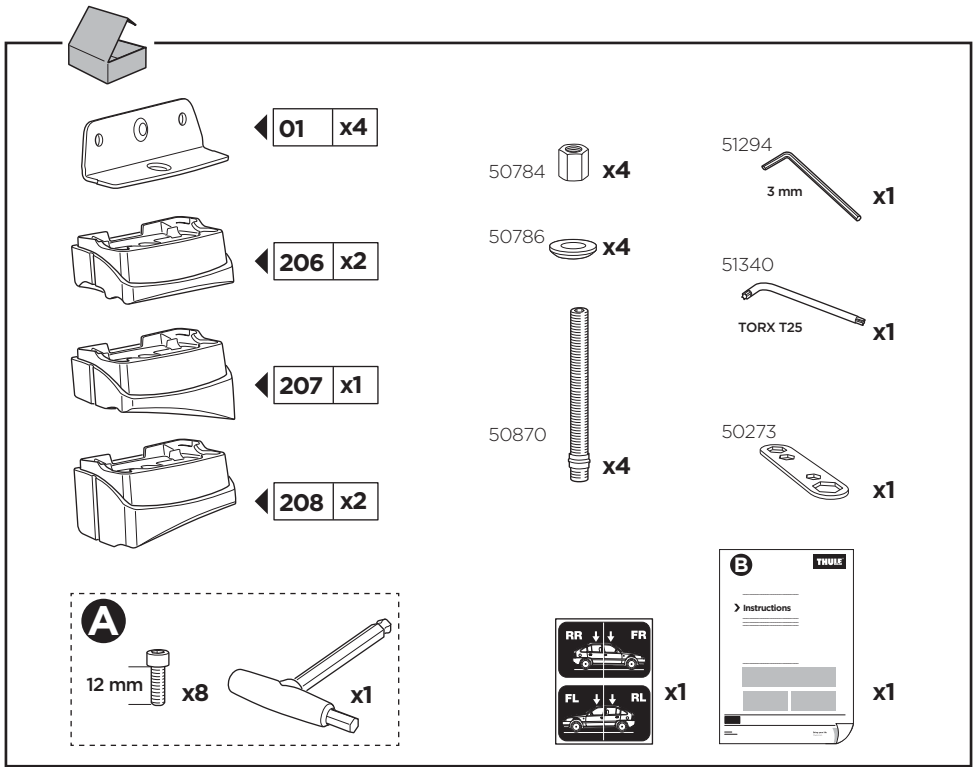


2

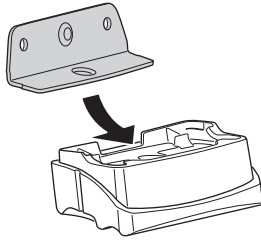


C

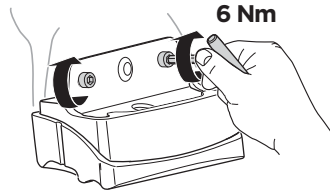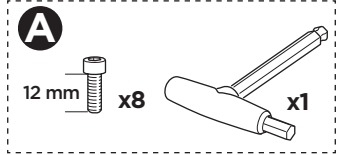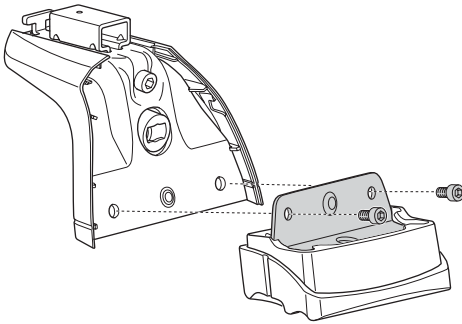


3




x1

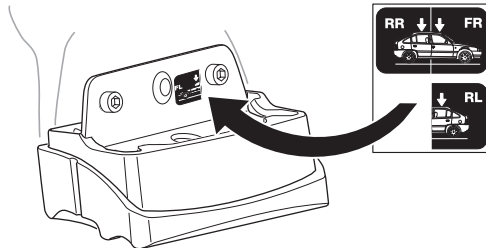


4




A

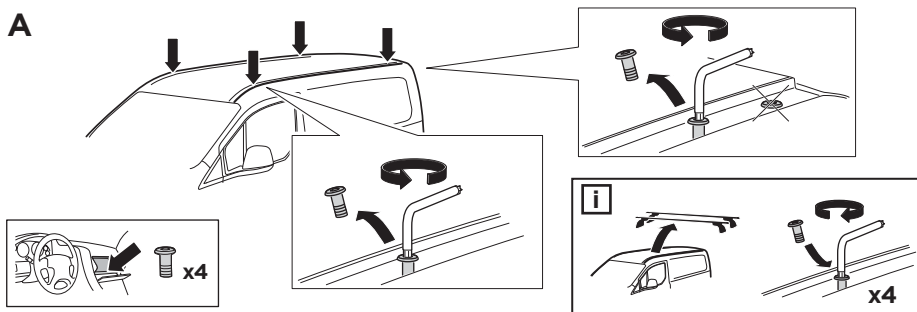


B

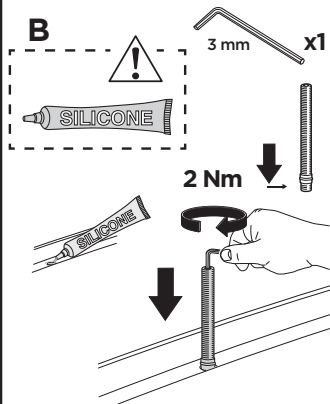

C

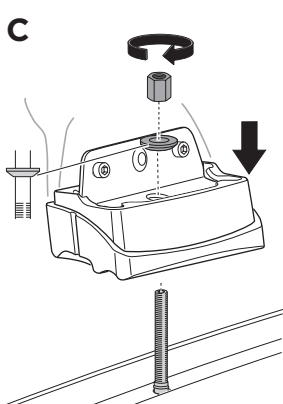

D

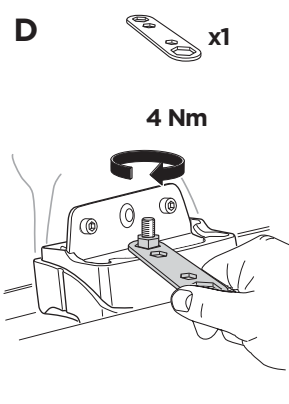

5

