




KIT

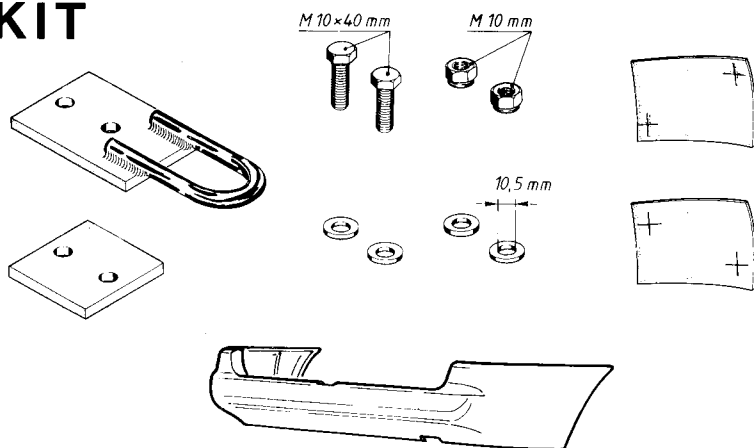


1

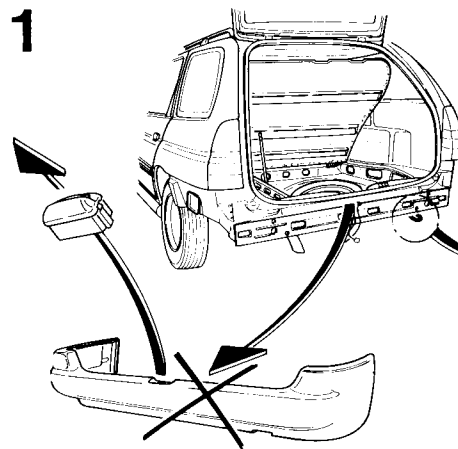


2

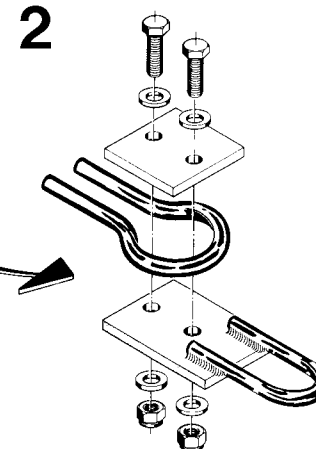


3

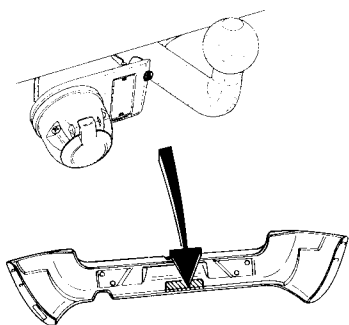


3.1

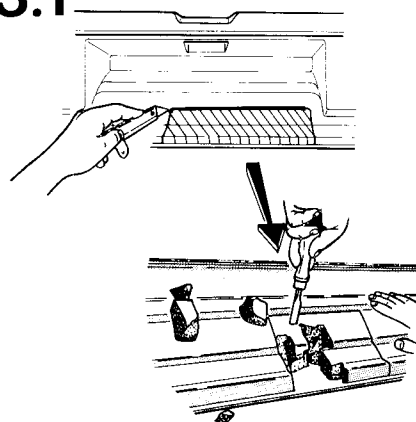


3.2

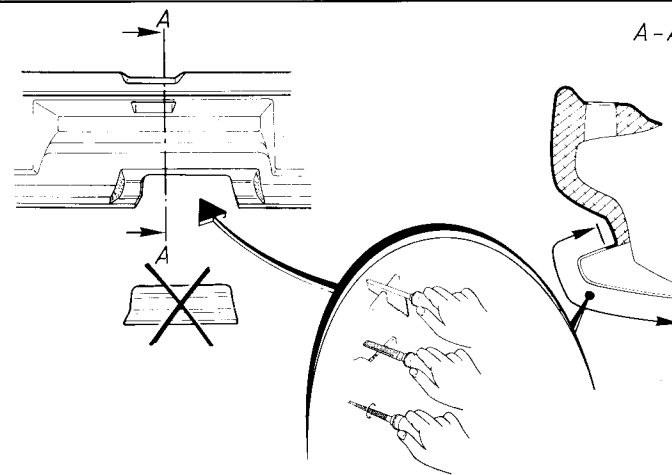


4

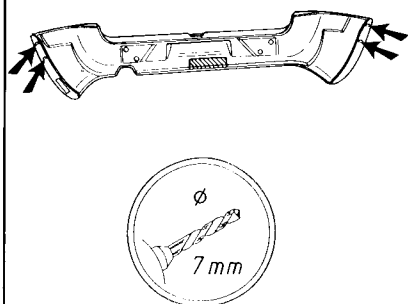

5

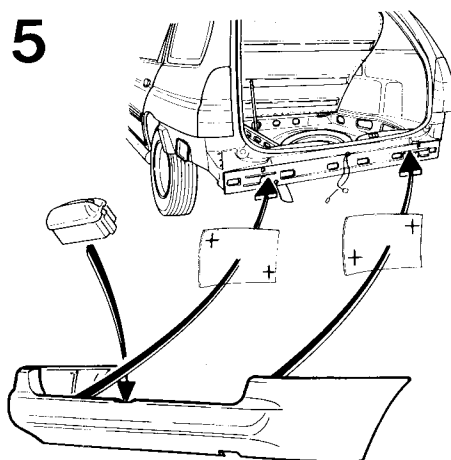

6

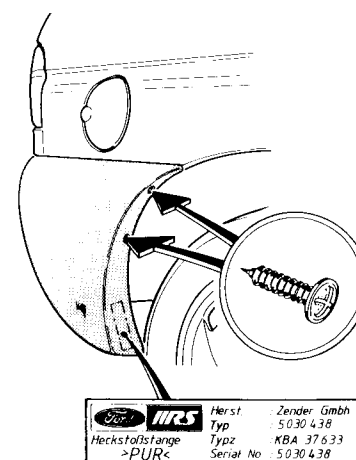

5 030 439

K95AX 17862 CA
HM02 E 10529144 000 12. 07. 95

HECKSTOSSSTANGE
EINBAUANLEITUNG

REAR BUMPER
FITTING INSTRUCTIONS

PARE-CHOCs ARRIÈRE
INSTRUCTIONS DE MONTAGE

BAGESTE FOFANGER
MONTERINGSVEJLEDNING

PARACHOCOS TRASERO
INSTRUCCIONES DE MONTAJE

PARAURTI POSTERIORE
ISTRUZIONI DI MONTAGGIO

BAKRE STÖTFANGER
MONTASJEVEILEDNING

ACHTERBUMPER
INBOUWINSTRUKTIES

PÁRA-CHOQUES TRASEIRO
INSTRUÇÕES DE MONTAGEM

BAKRE STÖTFÅNGARE
MONTERINGSANVISNING

TAKASPUSKURIN
ASENNUSOHJEET

Technische Änderungen vorbehalten
Subject to alteration without notice
Sous réserve de modifications techniques
Reservadas modificaciones técnicas
Med forbehold for tekniske ændringer
Con riserva di apportare modifiche tecniche
Teknische forendringer forbeholdes
Technische wijzigingen voorbehouden
Reservamo-nos o direito a alterações técnicas
Med reservation for tekniska ändringar
Tekniset muutokset pidätetään

Herst. Zender GmbH
Typ 5030 438
Heckstoßstange Typz KBA 37 633
>PUR< Serial No. 5030 438