

EN	INSTALLATION INSTRUCTION ROOF SPOILER
D	EINBAUANLEITUNG DACHSPOILER
E	INSTRUCCIONES DE MONTAJE SPOILER DE TECHO
F	NOTICE DE MONTAGE SPOILER DE TOIT
I	ISTRUZIONI DI MONTAGGIO SPOILER SUL TETTO
P	INSTRUÇÕES DE MONTAGEM DEFLECTOR DE AR DE TAJADILHO
NL	INBOUW-INSTRUCTIE DAKSPOILER
DK	MONTERINGSVEJLEDNING TAGSPOILER
N	MONTERINGSVEILEDNING TAKSPOILER
S	MONTERINGSANVISNING TAKSPOILER
SF	ASENNUSOHJE KATTOSPOILERI
CZ	NÁVOD K MONTÁŽI STŘEŠNÍ SPOILER
H	BESZERELÉSI UTASÍTÁSA TETŐSPOILER
PL	INSTRUKCJA MONTAŻU SPOILER DACHOWY
GR	ΟΔΗΓΙΕΣ ΤΟΠΟΘΕΤΗΣΗΣ Σπόιλερ Οροφής
TR	MONTAJ TALİMATLARI TAVAN SPOYLERİ
RUS	ИНСТРУКЦИЯ ПО МОНТАЖУ СПОЙЛЕР НА КРЫШУ
RO	INSTRUCȚIUNI DE MONTAJ SPOILER ACOPERIȘ





© Copyright Ford-Werke GmbH 2024

Printed Copies are uncontrolled

Expert Fitment Required
 Montage durch Fachwerkstatt erforderlich
 Montaje sólo por el concesionario
 Montage par spécialiste nécessaire
 E' necessario montaggio in officina specializzata
 Especialista em montagem requerido
 Montage door vakman nodig
 Montage ved professionelt værksted påkævet
 Nødvendig med montering fra fagvegværksted
 Verkstadsmontage erfordras
 Asennus tarpeen merkikokijamossa
 Montáž ve specializované dílně nutná
 A szereléshez szakműhely kell
 Konieczny montaż przez warsztat specjalistyczny
 Να τοποθετηθεί από συνεργείο
 Монтаж должен проводиться только в
 специализированных мастерских
 Montaj tamirhane tarafından yapılmalıdır
 Montajul trebuie efectuat de un atelier
 de specialitate



Fitting in a HV electric car or hybrid vehicle must only be done by qualified personnel. The required qualifications may vary depending on the region. Please observe the local legislation and legal directives relating to service to electric vehicles. Disregarding these instructions may lead to serious injuries or death.

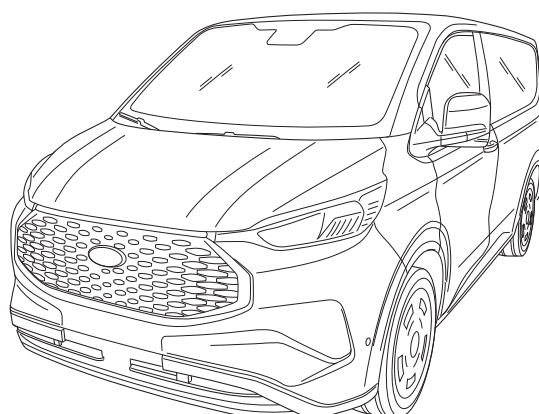

TRANSIT 07/2023 →

SKPZ3J-V44230-AA

22/01/2024