

EN	INSTALLATION INSTRUCTION INTERIOR ROOF RACK
D	EINBAUANLEITUNG INNERE DACHTRÄGER
E	ISTRUCCIONES DE MONTAJE BARRAS DE TECHO INTERIOR
F	NOTICE DE MONTAGE GALERIE DE TOIT INTÉRIEUR
I	ISTRUZIONI DI MONTAGGIO PORTAPACCHI INTERNI
P	INSTRUÇÕES DE MONTAGEM RACK DE TETO INTERIOR
NL	INBOUW-INSTRUCTIE INTERIEUR IMPERIAAL
DK	MONTERINGSVEJLEDNING INTERIØR TAGBAGAGEBÆRER
N	MONTERINGSVEILEDNING INTERIØRET TAKSTATIV
S	MONTERINGSANVISNING INTERIÖR TAKRÄCKE
SF	ASENNUSOHJE SISUSTUS KATTOTELINE
CZ	NÁVOD K MONTÁŽI INTERIÉR STŘEŠNÍ NOSIČ
H	BESZERELÉSI UTASÍTÁS BELSŐ TETŐCSOMAGTARTÓ
PL	INSTRUKCJA INSTALOWANIA WNĘTRZE BAGAŻNIKA DACHOWEGO
GR	ΟΔΗΓΙΕΣ ΤΟΠΟΘΕΤΗΣΗΣ εσωτερικό σχάρα οροφής
TR	MONTAJ TALİMATLARI İÇ TAVAN RAFI
RUS	ИНСТРУКЦИЯ ПО МОНТАЖУ Интерьер багажник на крышу
RO	INSTRUCȚIUNI DE MONTAJ INTERIORUL BARE LONGITUDINALE PE ACOPERIȘ




© Copyright Ford 2014

Printed Copies are uncontrolled

Expert Fitment Required
Montage durch Fachwerkstatt erforderlich
Montaje sólo por el concesionario
Montage par spécialiste nécessaire
E' necessario montaggio in officina specializzata
Especialista em montagem requerido
Montage door vakman nodig
Montage ved professionelt værksted påkrævet
Nødvendig med montering fra fagværksted
Verkstadsmontage erfordras
Asennus tarpeen merkkikorjaamossa
Montáz ve specializované dílně nutná
A szereléshez szakmühely kell
Konieczny montaż przez warsztat specjalistyczny
Να τοποθετηθεί από συνεργείο
Установку следует выполнять в
специализированном сервис-центре
Montaj tamirhane tarafından yapılmalıdır
Montajul trebuie efectuat de un atelier de specialitate

Subject to alteration without notice
Technische Änderungen vorbehalten
Reservadas modificaciones técnicas
Sous réserve de modifications techniques
Con riserva di apportare modifiche tecniche
Reservamo-nos o direito a alterações técnicas
Technische wijzigingen voorbehouden
Med forbehold for tekniske ändringer
Tekniske forendringer forbeholdes
Med reservation för tekniska ändringar
Tekniset muutokset pidätetään
Technické zmeny vyhrazeny
A változtatások technika jogát fenntartjuk
Zmiany techniczne zastrzeżone
Επιφύλασσόμεθα για αλλαγές
Teknik değişiklikler yarma hakkı saklıdır
Мы оставляем за собой право на
технические изменения
Ne rezervăm dreptul la modificări tehnice

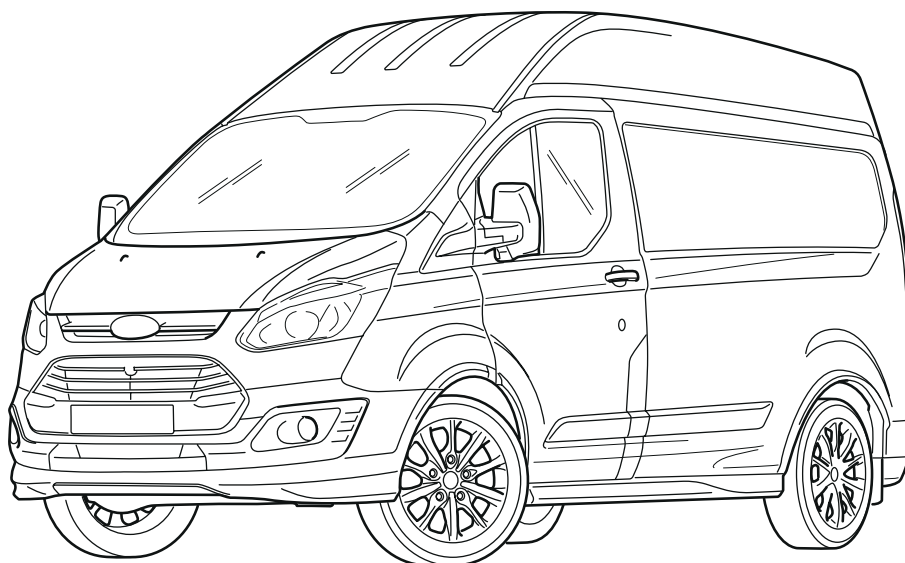

TRANSIT 08/2012 ➔

SKBK2J V13500 DA

03/04/14

1/10



- (EN) Caution Symbol
- (D) Symbol "Vorsicht"
- (E) Símbolo de precaución
- (F) Symbole Attention
- (I) Simbolo di attenzione
- (P) Símbolo de Cuidado
- (NL) Symbool "waarschuwing"
- (DK) Symbol – Giv agt
- (N) Varselssymbol
- (S) Varningssymbol
- (SF) Varoitus-symboli
- (CZ) Symbol výstrahy
- (H) Vigyázat szimbólum
- (PL) Ostrożnie
- (GR) Σύμβολο «Προσοχή»
- (TR) Dikkat Sembolü
- (RUS) Знак «Внимание!»
- (RO) Simbol de atenționare









- (EN) Item Arrow
- (D) Pfeil "Komponente"
- (E) Flecha de artículo
- (F) Flèche d'élément
- (I) Freccia indicante oggetto
- (P) Seta indicadora de item
- (NL) Pijl "onderwerp"
- (DK) Pil – Punkt
- (N) Delpil
- (S) Komponentpil
- (SF) Kohteen nuoli
- (CZ) Šipka označující položku
- (H) Tételt jelző nyíl
- (PL) Strzałka wskazująca element
- (GR) Βέλος που υποδεικνύει ένα στοιχείο
- (TR) Parça Oku
- (RUS) Стрелка на пункт
- (RO) Săgeată ce indică articolul






- (EN) Motion Arrow
- (D) Pfeil Bewegung
- (E) Flecha de movimiento
- (F) Flèche de déplacement
- (I) Freccia indicante movimento
- (P) Seta de movimento
- (NL) Pijl "beweging"
- (DK) Retningspil
- (N) Bevegelsespil
- (S) Rörelsepil
- (SF) Liikkeen nuoli
- (CZ) Šipka označující pohyb
- (H) Mozgás irányát jelző nyíl
- (PL) Strzałka wskazująca kierunek ruchu
- (GR) Βέλος που υποδεικνύει κίνηση
- (TR) Hareket oku
- (RUS) Стрелка направления движения
- (RO) Săgeată ce indică mișcarea

- (EN) Tools Required
- (D) Benötigte Werkzeuge
- (E) Herramientas requeridas
- (F) Outils requis
- (I) Strumenti necessari
- (P) Ferramentas necessárias
- (NL) Benodigd gereedschap
- (DK) Nødvendige værktøjer
- (N) Nødvendig verktøy
- (S) Nödvändiga verktyg
- (SF) Tarvittavat työkalut
- (CZ) Potřebné nástroje
- (H) Szükséges szerszámok
- (PL) Potrzebne narzędzia
- (GR) Εργαλεία που απαιτούνται
- (TR) Gereklİ Araçlar
- (RUS) Необходимые инструменты
- (RO) Uneelte necesare




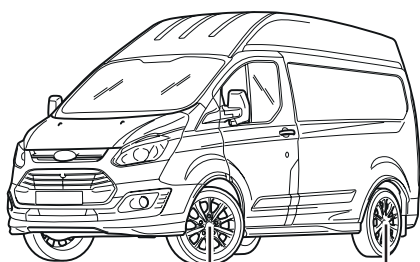


2933 mm

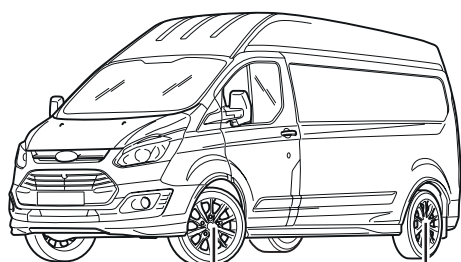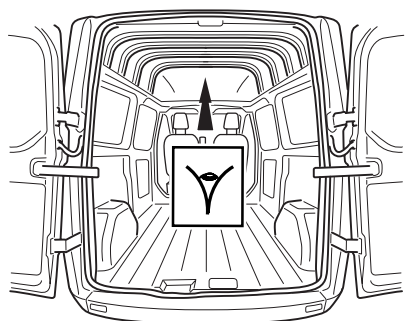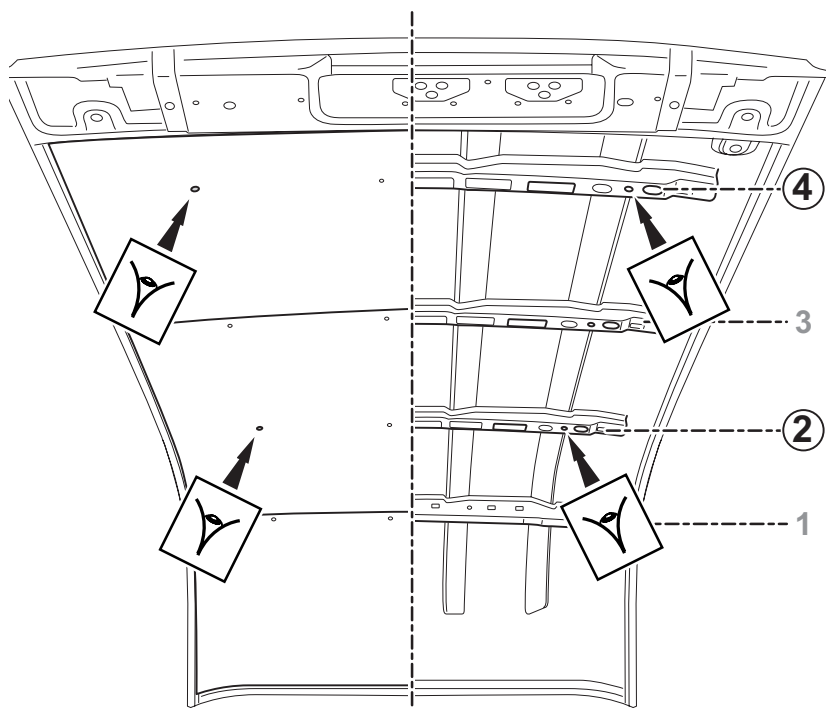

3300 mm

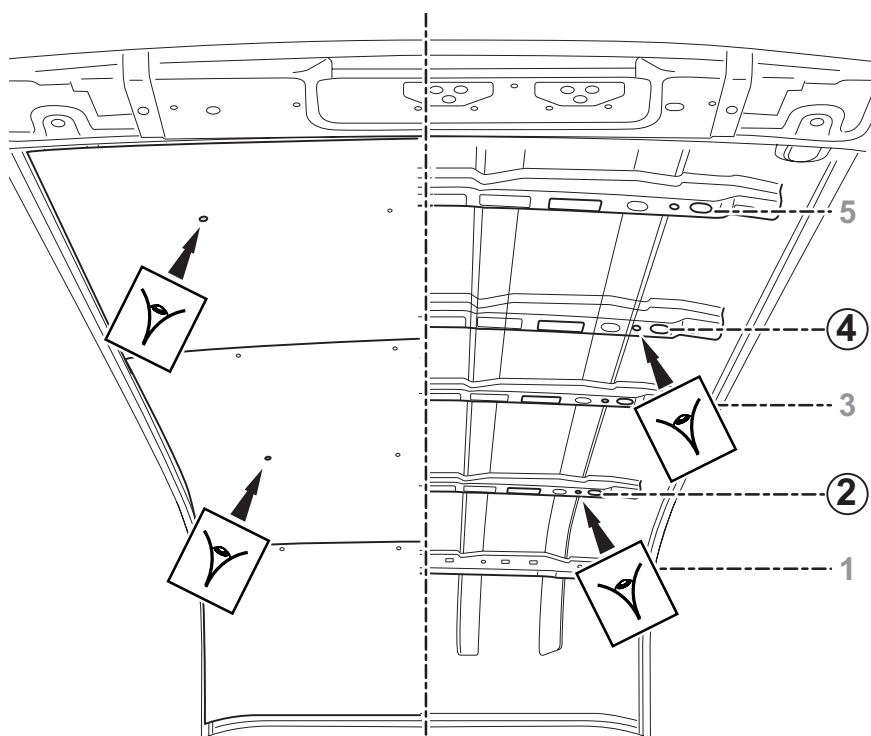


1

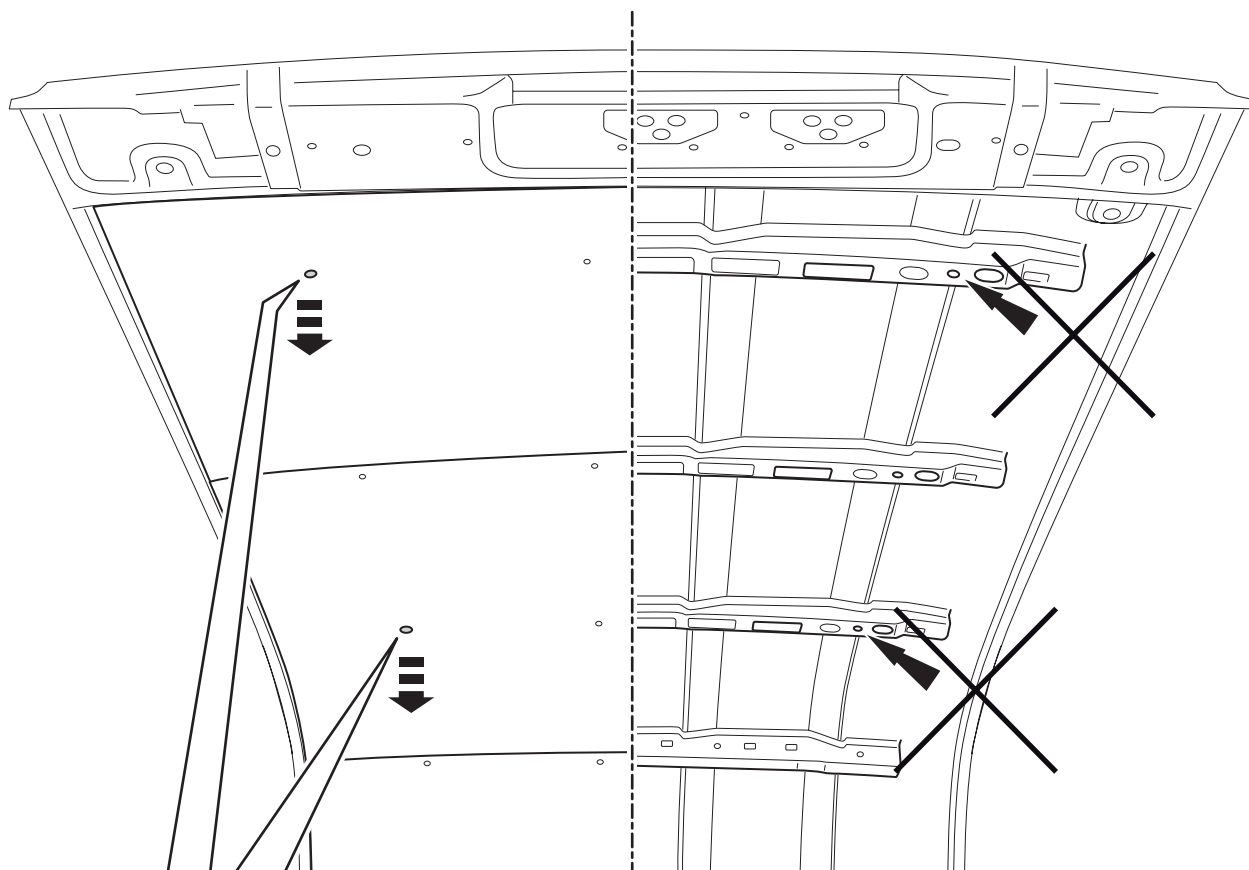


1




2

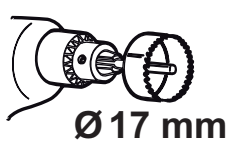

Ø 17 mm

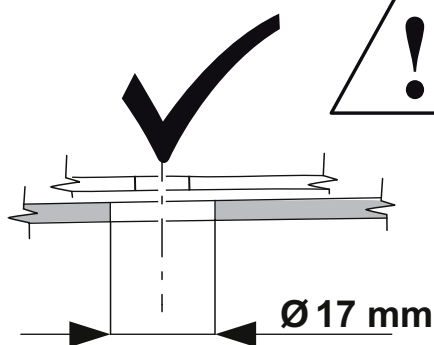

Ø 17 mm

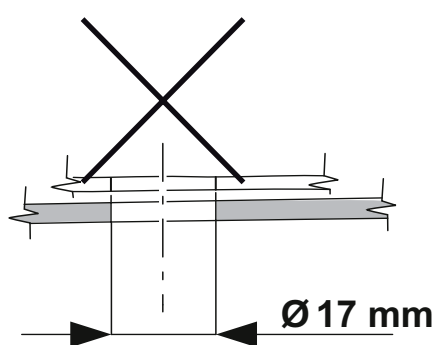

Ø 17 mm


2





SKBK2J V13500 DA

© Copyright Ford 2014

5/10

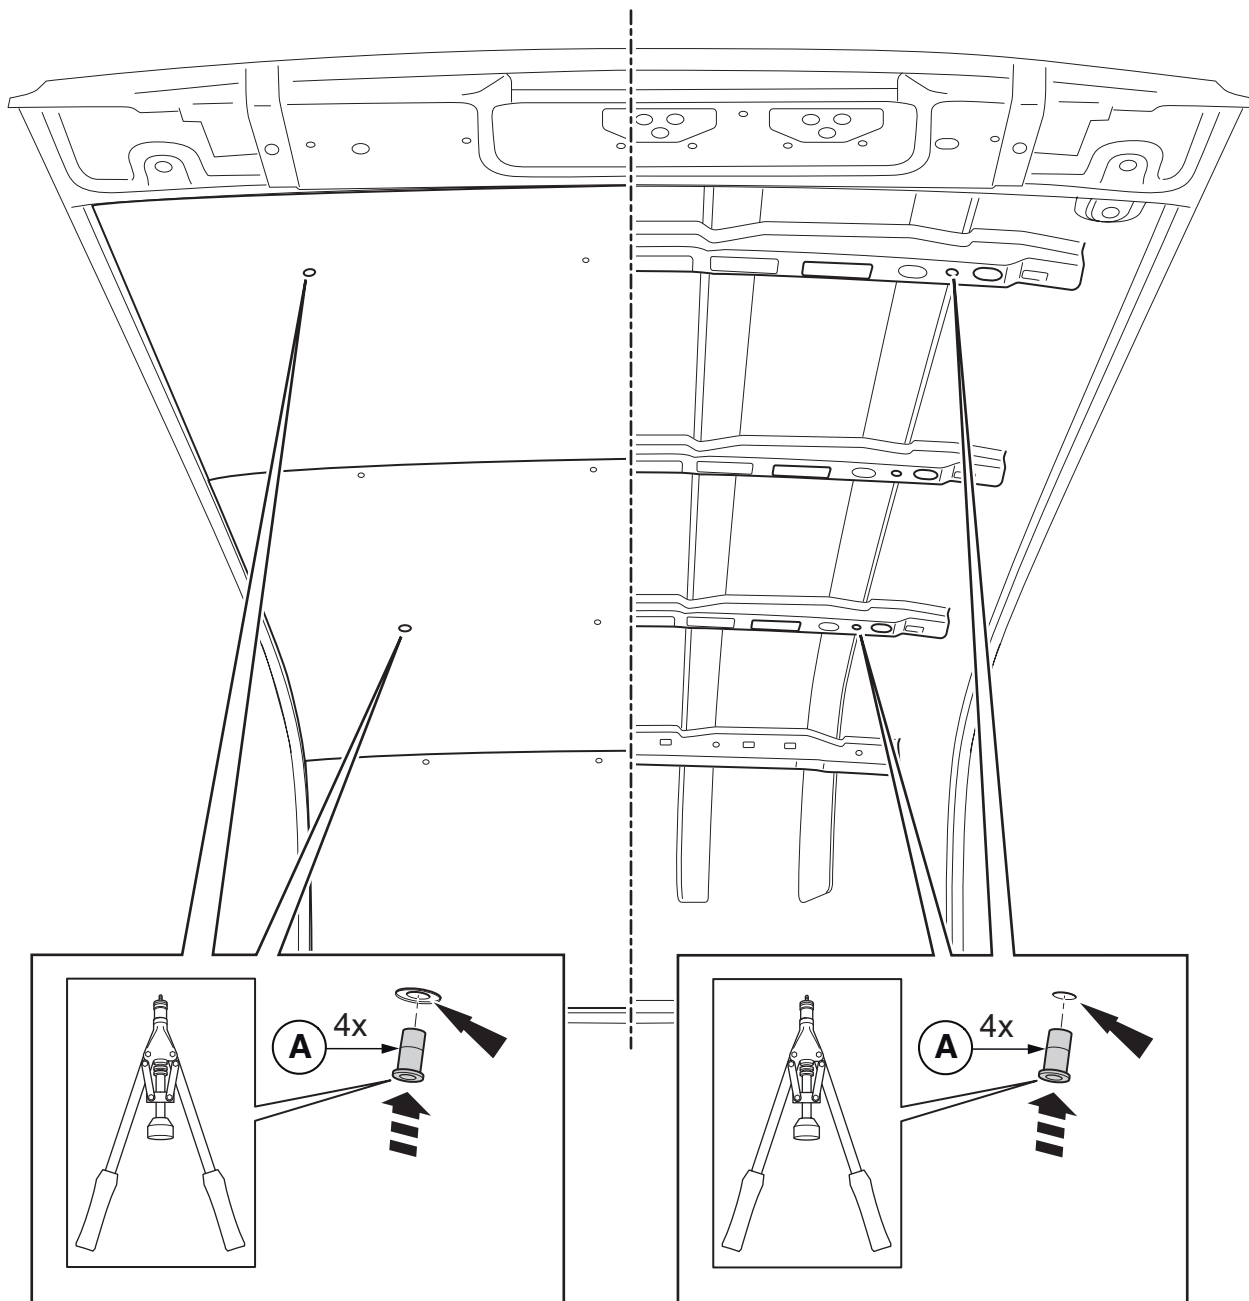

3

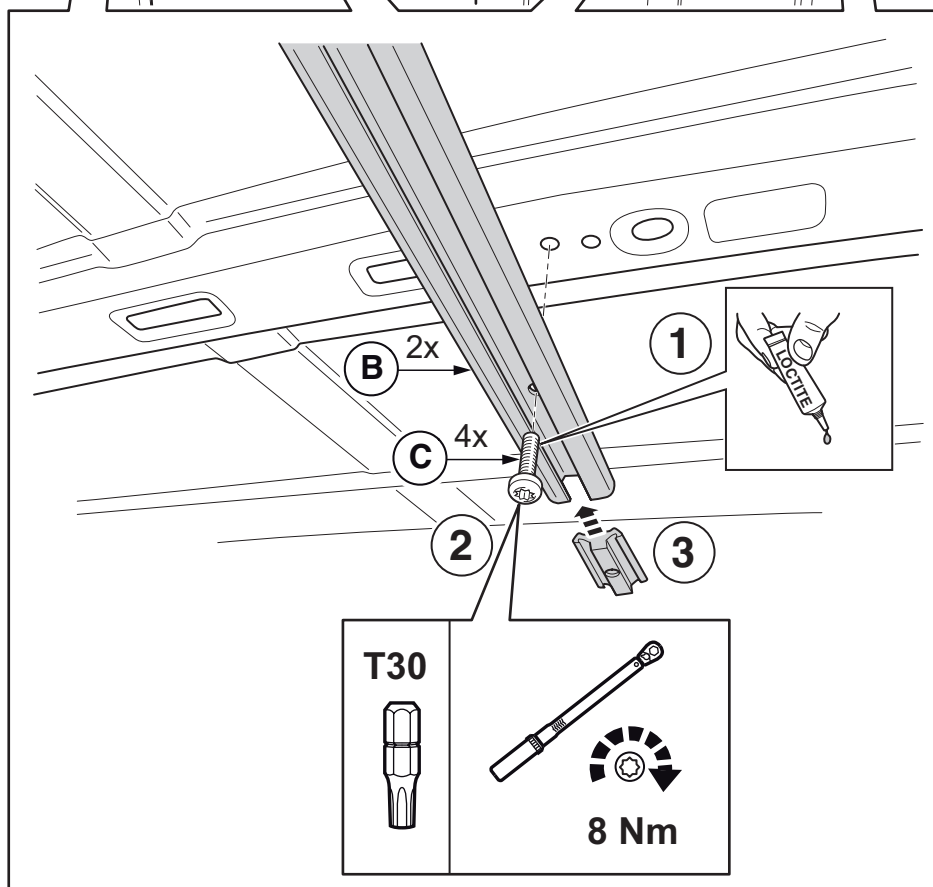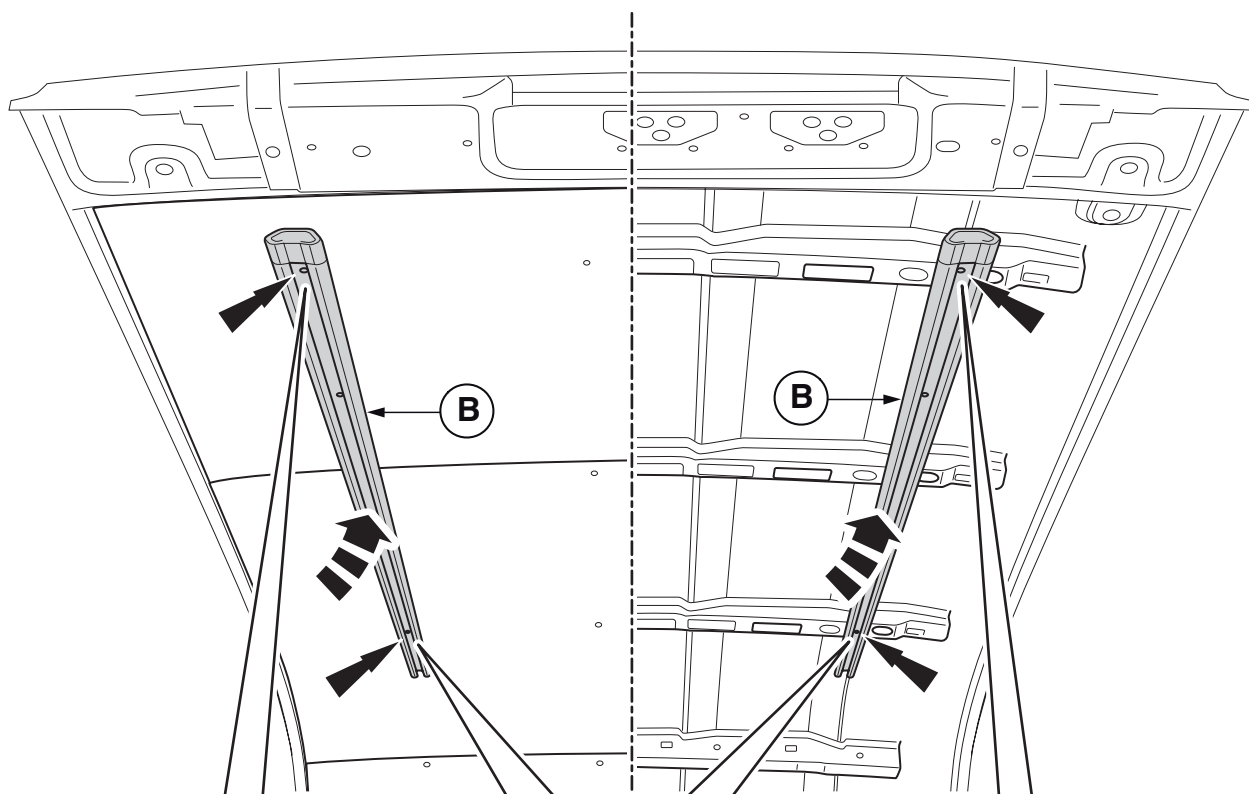



4





SKBK2J V13500 DA

© Copyright Ford 2014

7/10

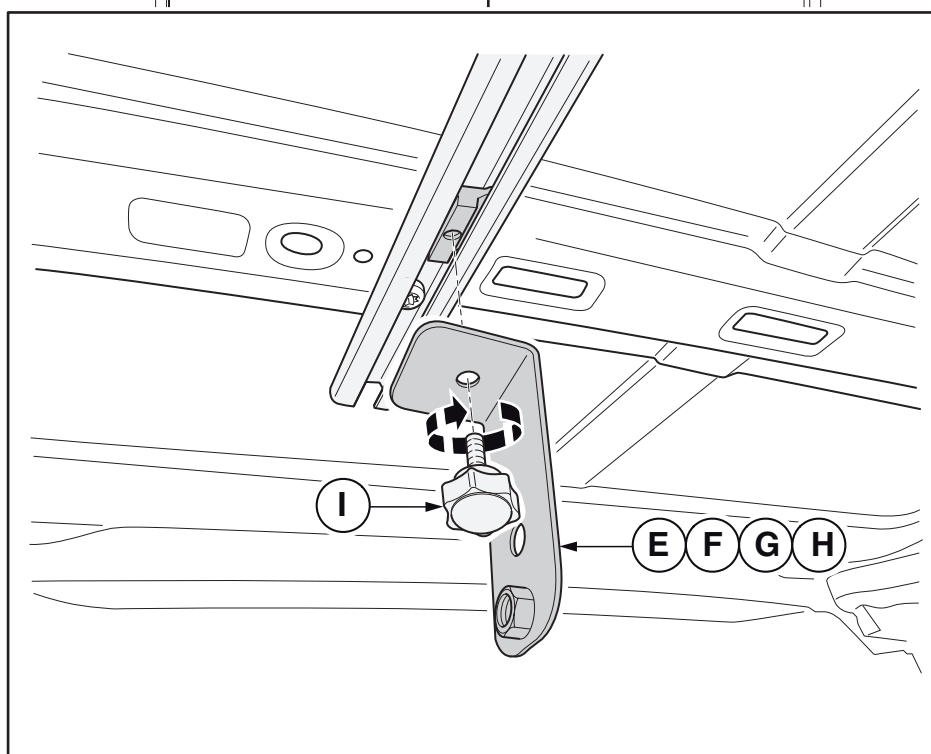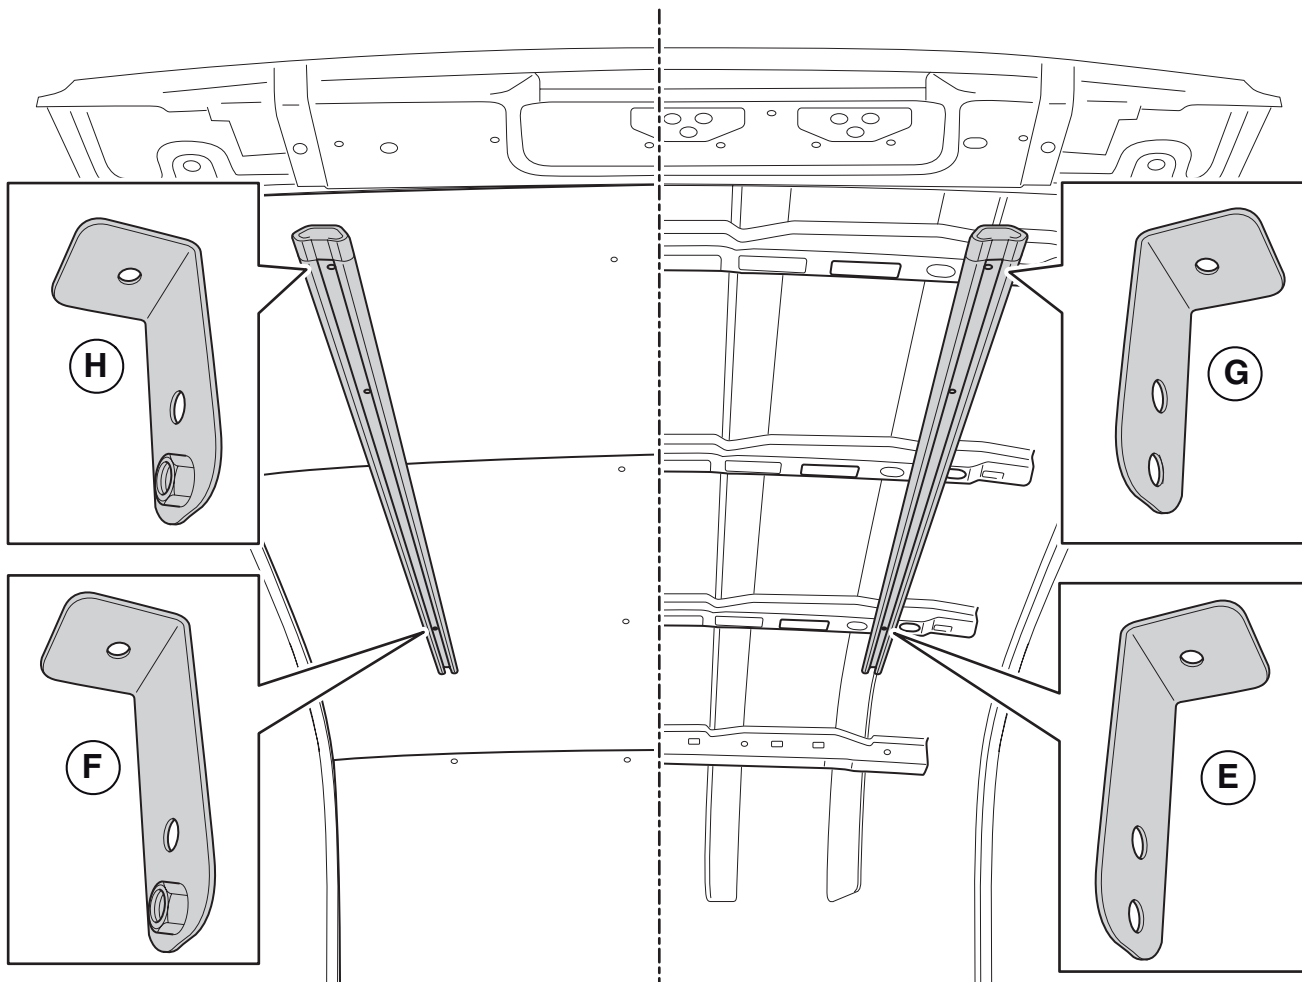

5

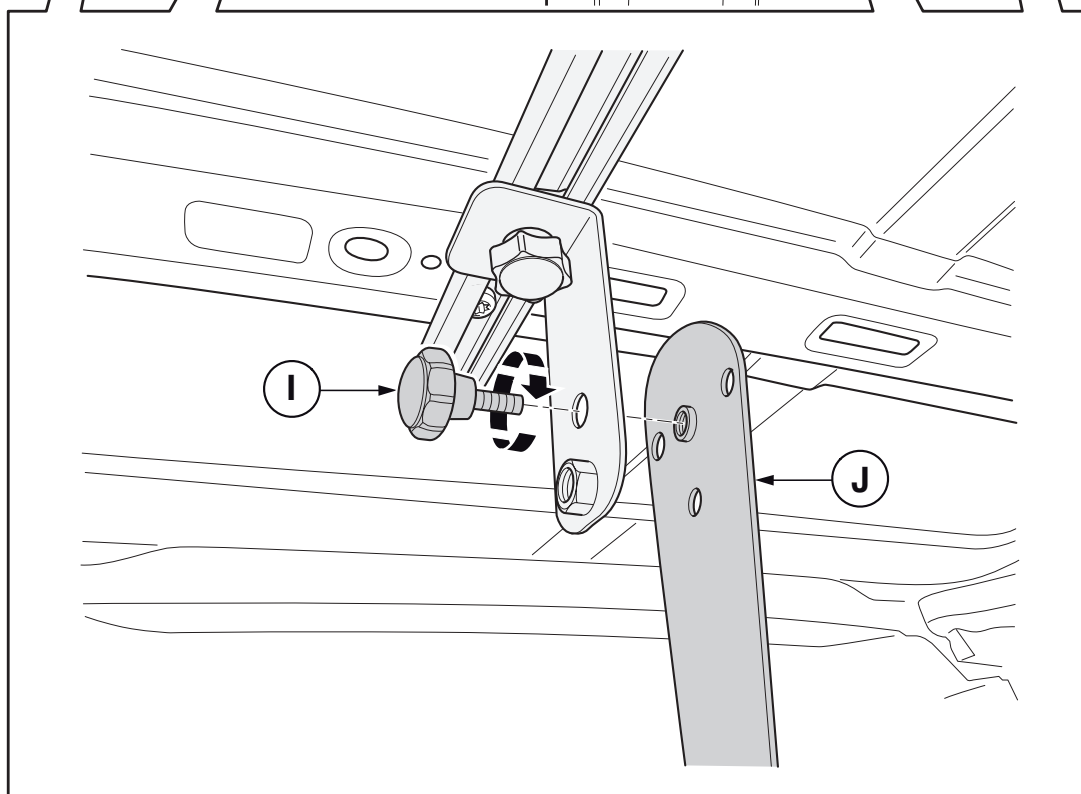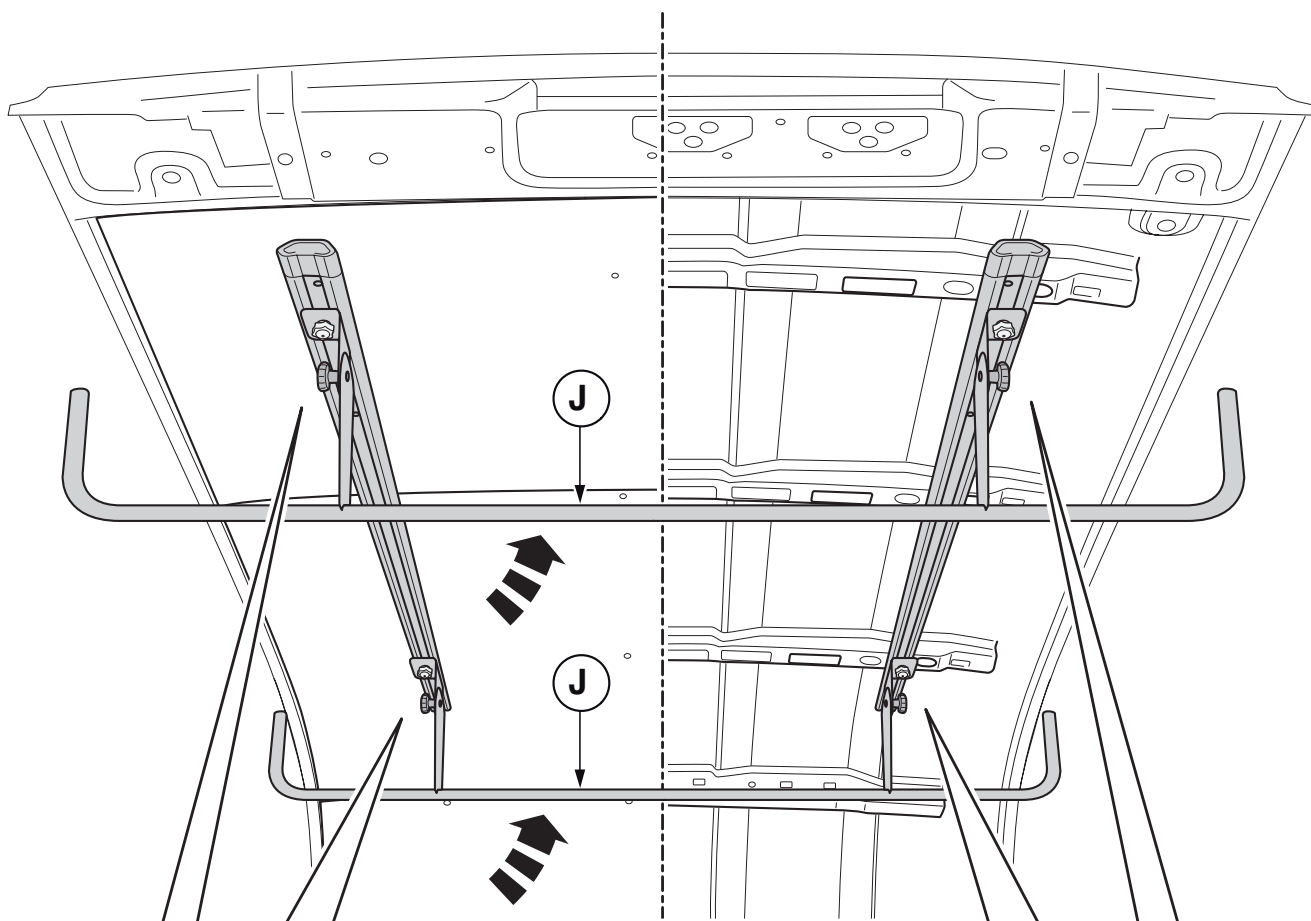



6



SKBK2J V13500 DA

© Copyright Ford 2014

910

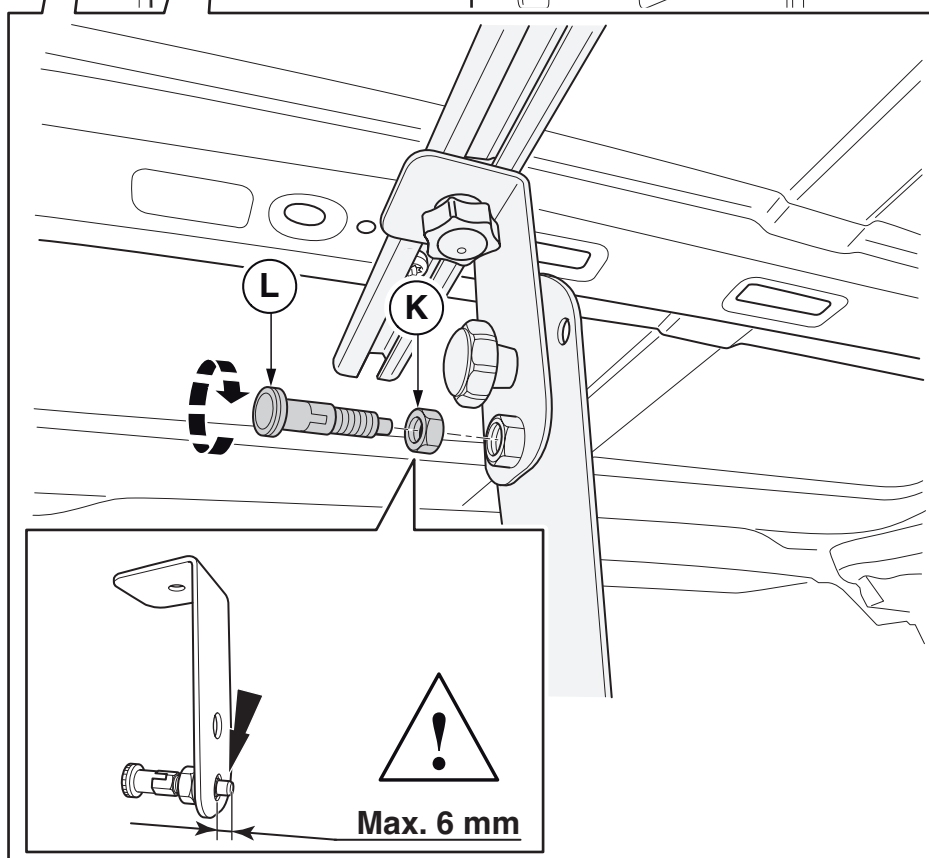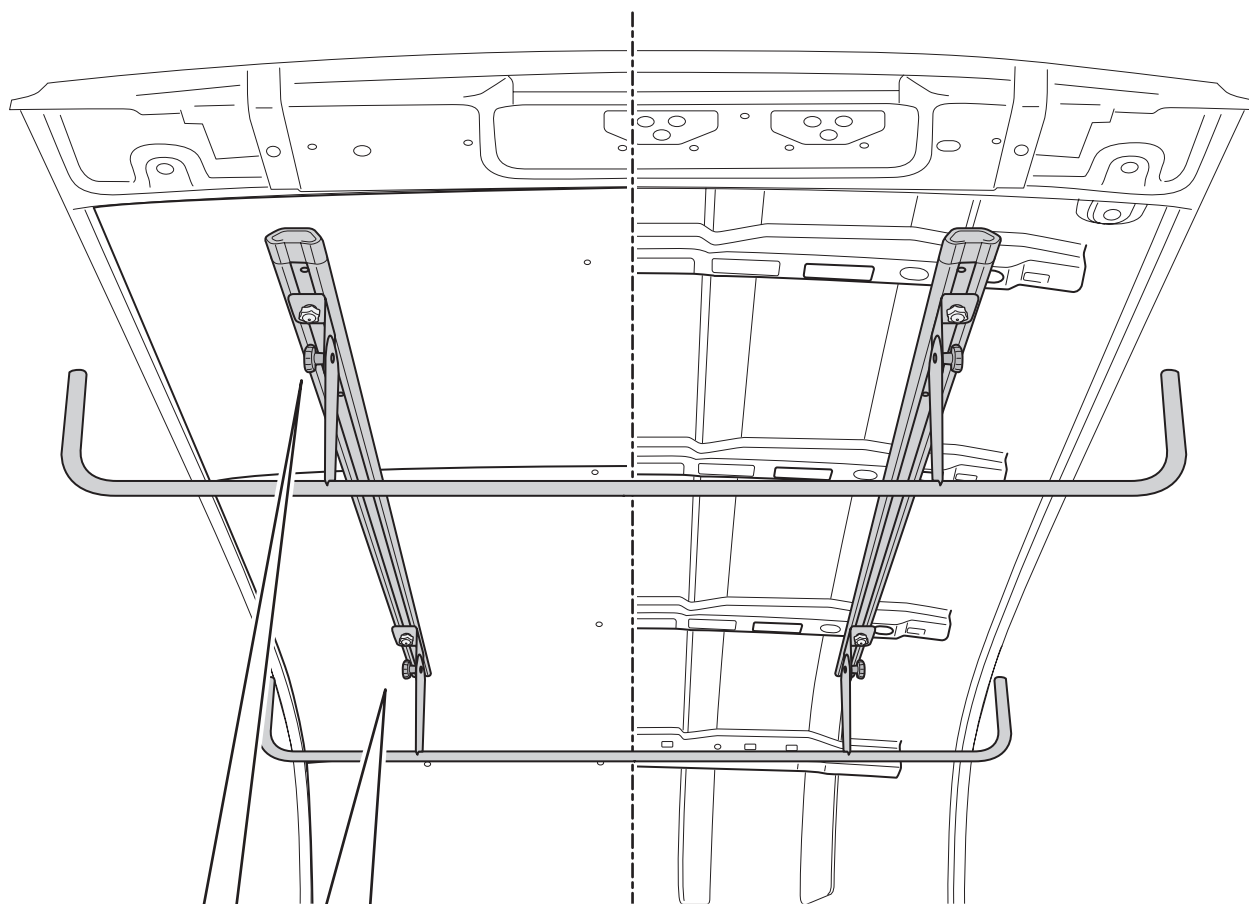

7