

Ford Ranger

TAILGATE STRUT KIT Installation Instructions










Model year: 2011-2015; 2015-

Part No.: 2AB.ST.1805.1


Compatibility: all types

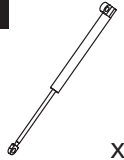Weight: 1 kg


Installation time: 30 min

A  x1	B  x1	C  x1	D  M10x30 x1	E  x2
F  x2	 Installation Instructions			


Required Tools

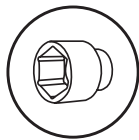

16 mm

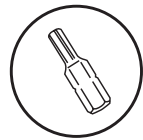

HEX 4

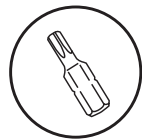

TORX 40

