

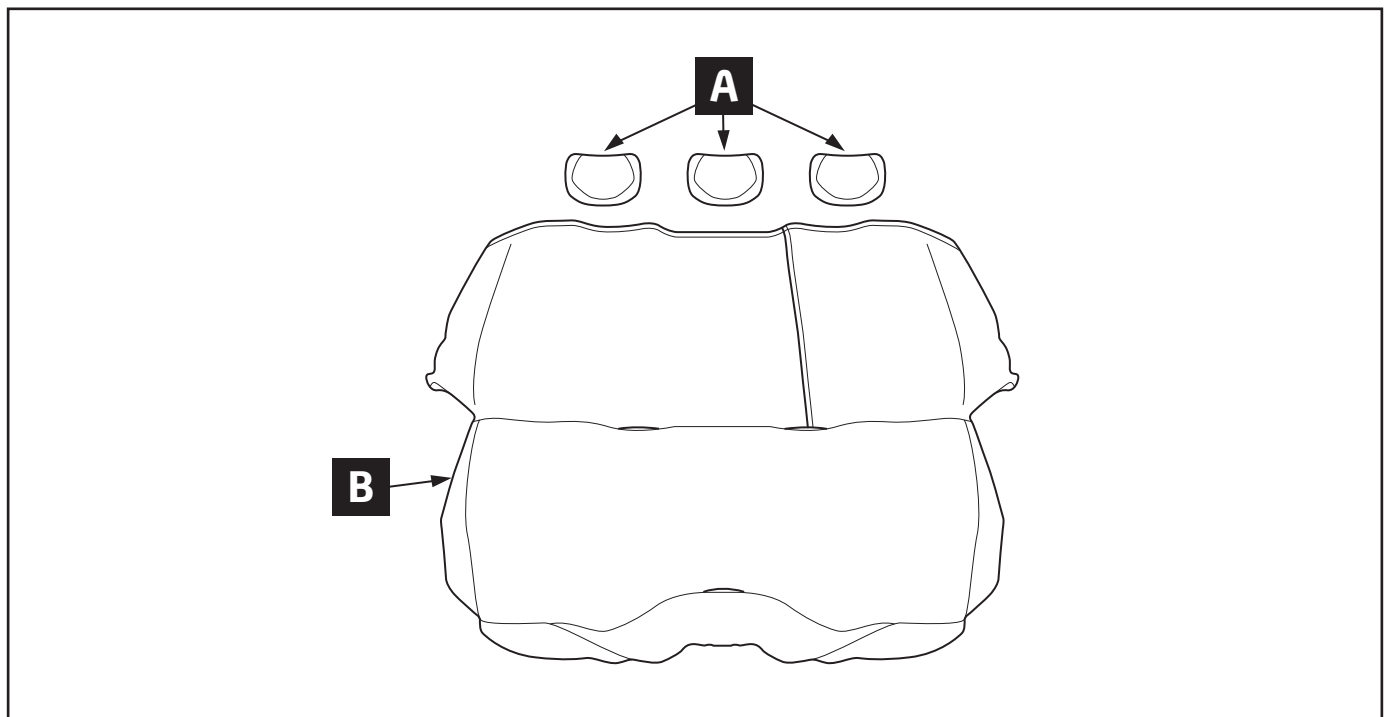



GB	INSTALLATION INSTRUCTION PROTECTIVE SEAT COVER
D	EINBAUANLEITUNG SCHUTZSITZABDECKUNG
E	INSTRUCCIONES DE MONTAJE CUBIERTA DE ASIENTO PROTECTORA
F	INSTRUCTIONS DE MONTAGE HOUSSE DE PROTECTION
I	ISTRUZIONI DI MONTAGGIO COPRISIDILE PROTETTIVO
P	INSTRUÇÕES DE MONTAGEM TAMPA DO ASSENTO DE PROTEÇÃO
NL	INBOUW-INSTRUCTIE BESCHERMEDE STOELBEKLEDING
DK	MONTERINGSVEJLEDNING BESKYTTENDE SÆDEBETRÆK
N	MONTERINGSVEILEDNING BESKYTTENDE SETETREKK
S	MONTERINGSANVISNING SKYDDSSÅKERT SKYDD
SF	ASENNUSOHJE SUOJAKUORI
CZ	NÁVOD K MONTÁŽI OCHRANNÝ KRYT SEDADLA
H	BESZERELÉSI UTASÍTÁS VÉDŐ ÜLÉSHUZAT
PL	INSTRUKCJA ZABUDOWY OCHRONNA OSŁONA SIEDZENIA
GR	Οδηγίες τοποθέτησης ΠΡΟΣΤΑΤΕΥΤΙΚΟ ΚΑΛΥΜΜΑ ΚΑΘΙΣΜΑΤΟΣ
TR	MONTAJ TALIMATI KORUYUCU KOLTUK ÖRTÜSÜ
RUS	инструкция по установке ЗАЩИТНАЯ ЧЕХОЛ ДЛЯ СИДЕНЬЯ
RO	INSTRUCȚIUNI DE MONTAJ CAPAC DE PROTECȚIE PENTRU SCAUN

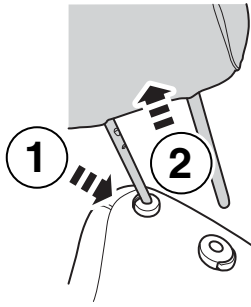



V362	151	FINIS CODE: 2326850	18/09/18	1/2
------	-----	---------------------	----------	-----

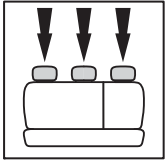




1

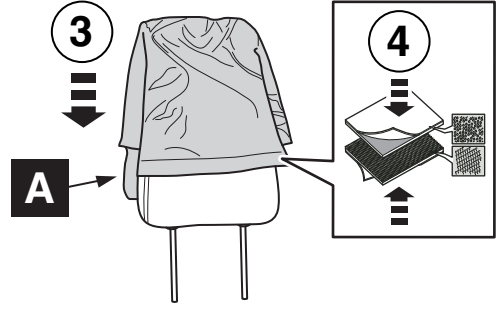

2

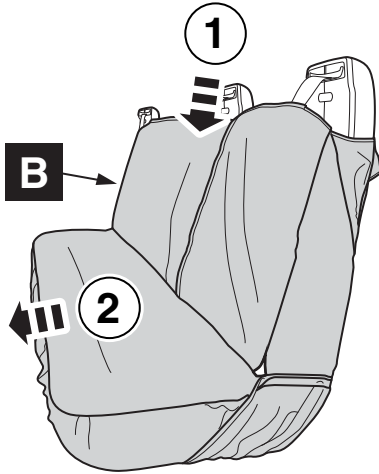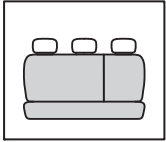

3

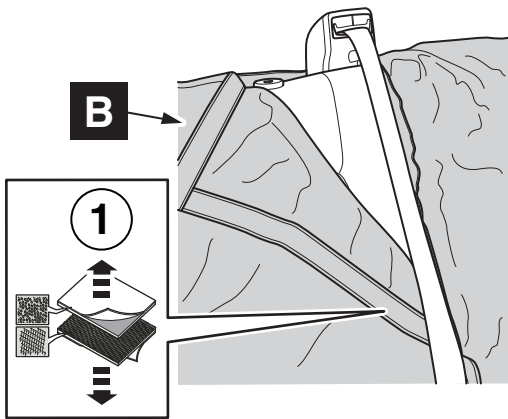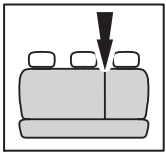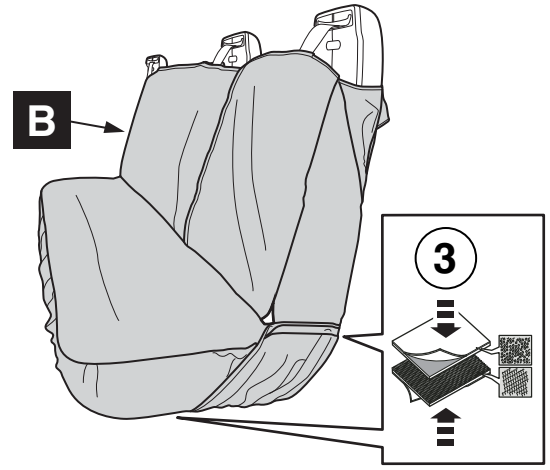

4

