

Ford Mustang (S550) / MY 2017 - on going

Installer Skill Level






GB	INSTALLATION INSTRUCTIONS
D	EINBAUANLEITUNG
E	INSTRUCCIONES DE MONTAJE
F	INSTRUCTIONS DE MONTAGE
I	ISTRUZIONI DI MONTAGGIO
P	INSTRUÇÕES DE MONTAGEM
NL	INBOUW-INSTRUCTIE
DK	MONTERINGSVEJLEDNING
N	MONTERINGSVEILEDNING
S	MONTERINGSANVISNING
SF	ASENNUSOHJE
CZ	NÁVOD K MONTÁŽI
H	BESZERELÉSI UTASÍTÁS
PL	INSTRUKCJA ZABUDOWY
GR	Οδηγίες τοποθέτησης
RO	INSTRUCȚIUNI DE MONTAJ

Expert Fitment Required
Montage durch Fachwerkstatt erforderlich
Montaje sólo por el concesionario
Montage par spécialiste nécessaire
E' necessario in officina specializzata
Especialista em montagem requerido
Motage door vakman nodig
Montage ved professionelt værksted påkrævet
Nødvendig med montering fra fagvevkersted
Verkstadsmontage erfordras
Asennus tarpeen merkkikorjaamossa
Montáž ve specializované dílně nutná
A szereléshez szakműhely kell
Konieczny montaż przez warsztat specjalistyczny
Na τοποθεεί απο συνεργείο
Montajul trebuie efectuat de un atelier de specialitate

Subject to alteration without notice
Technische Änderungen vorbehalten
Reservadas modificaciones técnicas
Sous réserve de modifications techniques
Con riserva di apportare modifiche tecniche
Reservamo nos o direito a alterações técnicas
Technische wijzigingen voorbehouden
Med forbehold for tekniske indringer
Tekniske forendringer forbeholdes
Med reservation för tekniska ändringar
Tekniset muutokset pidätetään
Technické zmeny vyhrazeny
A változtatások technika jogát fenntartjuk
Zmiany techniczne zastrzeżone
Επιφύλασσομεθα για αλλαγές
Ne rezervăm dreptul la modificări tehnice

Ford Mustang Fastback/Convertible (S550) / MY 2017 - on going

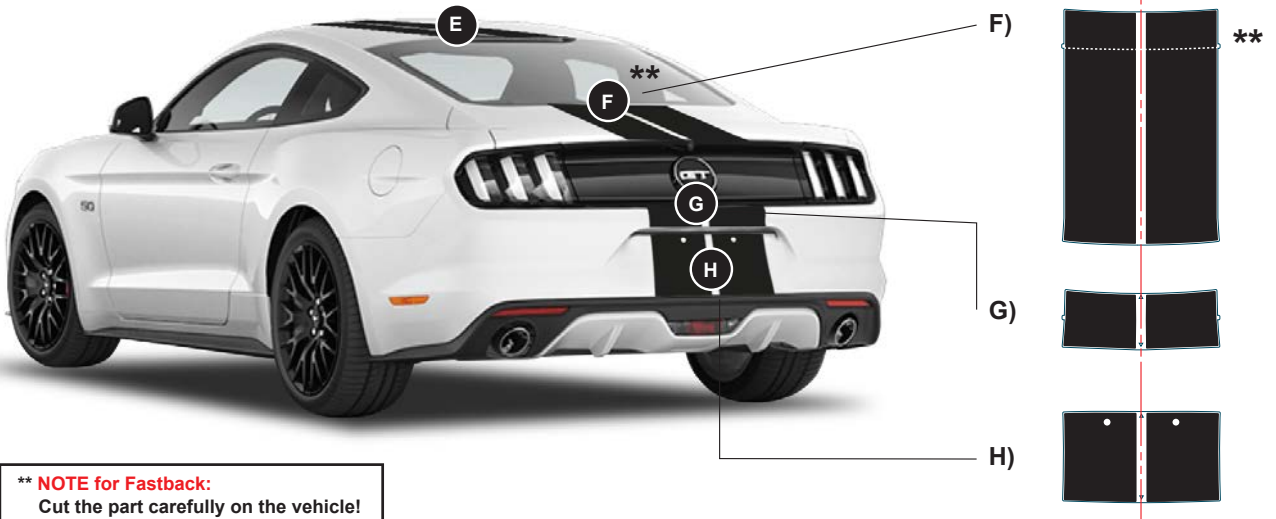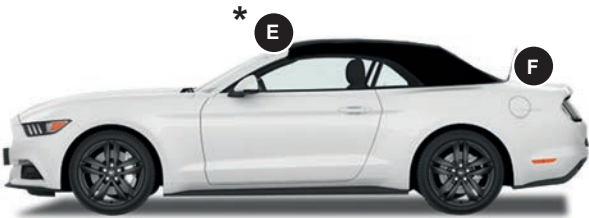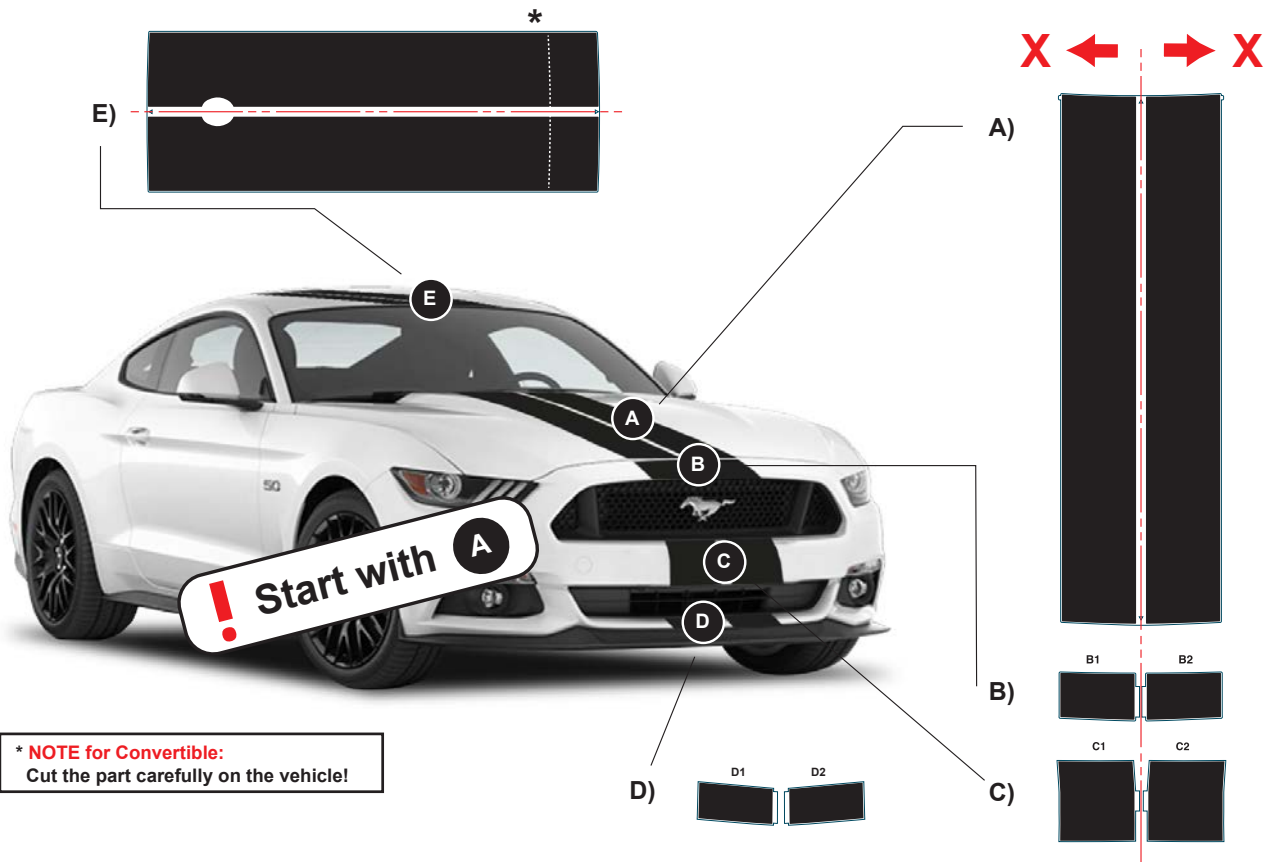



1 Don't use wax!

2 Only dry!

3 After! 48h

4



1

2

3

4

