



EN	INSTALLATION INSTRUCTION LUGGAGE NET REAR CARGO DOORS
D	EINBAUANLEITUNG HECKTÜREN-GEPÄCKNETZ
E	INSTRUCCIONES DE MONTAJE RED PORTAOBJETOS PARA LAS PUERTAS TRASERAS
F	INSTRUCTIONS DE MONTAGE FILET DE RANGEMENT POUR PORTE ARRIÈRE
I	ISTRUZIONI DI MONTAGGIO RETE PORTABAGAGLI PER PORTELLONI POSTERIORI
P	INSTRUÇÕES DE MONTAGEM REDE PARA BAGAGENS DAS PORTAS DO COMPARTIMENTO DE CARGA TRASEIRO
NL	INBOUW-INSTRUCTIE BAGAGENET ACHTERDEUREN
DK	MONTERINGSVEJLEDNING BAGAGENET TIL BAGDØRE
N	MONTERINGSVEILEDNING BAGASJENETT FOR BAKDØR
S	MONTERINGSANVISNING BAGAGENÄT BAKDÖRR
SF	ASENNUSOHJE TAKAOVEN TAVARAVERKKO
CZ	NÁVOD K MONTÁŽI SÍT NA ZAVAZADLA U ZADNÍCH DVEŘÍ
H	BESZERELÉSI UTASÍTÁSA CSOMAGHÁLÓ HÁTSÓ AJTÓRA
PL	INSTRUKCJA MONTAŻU SIATKA BAGAŻOWA NA TYLNE DRZWI
GR	ΟΔΗΓΙΕΣ ΤΟΠΟΘΕΤΗΣΗΣ ΔΙΧΤΥ ΑΠΟΣΚΕΥΩΝ ΘΥΡΩΝ ΠΙΣΩ ΧΩΡΟΥ ΦΟΡΤΙΟΥ
TR	MONTAJ TALİMATLARI ARKA KAPI BAGAJ FİLESİ
RUS	ИНСТРУКЦИЯ ПО МОНТАЖУ СЕТКА ДЛЯ БАГАЖА НА ЗАДНЕЙ ДВЕРИ
RO	INSTRUCȚIUNI DE MONTAJ PLASĂ DE BAGAJE UȘĂ PORTBAGAJ SPATE



© Copyright Ford-Werke GmbH 2023
Printed Copies are uncontrolled

Expert Fitment Required
Montage durch Fachwerkstatt erforderlich
Montaje sólo por el concesionaria
Montage par spécialiste nécessaire
E' necessario montaggio in officina specializzata
Especialista em montagem requerido
Montage door vakman nodig
Montage ved professionelt værktøed påkævet
Nødvendig med montering fra fagvejrværksted
Verkstadsmontage erfordras
Asennus tarpeen merkikokorjaamossa
Montáž ve specializované dílně nutná
A szereléshez szakműhely kell
Konieczny montaż przez warsztat specjalistyczny
Να τοποθετηθεί από συνεργείο
Монтаж должен проводиться только в
специализированных мастерских
Montaj tamirhane tarafından yapılmalıdır
Montajul trebuie efectuat de un atelier
de specialitate








Subject to alteration without notice
Technische Änderungen vorbehalten
Reservadas modificaciones técnicas
Sous réserve de modifications techniques
Con riserva di apportare modifiche tecniche
Reservamo-nos o direito a alterações técnicas
Technische wijzigingen voorbehouden
Med forbehold for tekniske ændringer
Tekniske forendringer forbeholdes
Med reservation för tekniska ändringar
Tekniset muutokset pidätetään
Technické zmeny vyhrazeny
A változtatások technika jogát fenntartjuk
Zmiany techniczne zastrzeżone
Επιφύλασσόμεθα για αλλαγές
Производитель оставляет за собой право
вносить в конструкцию технические изменения
Teknik değışiklik hakkı mahfuzdur
Ne rezervăm dreptul la modificări tehnice

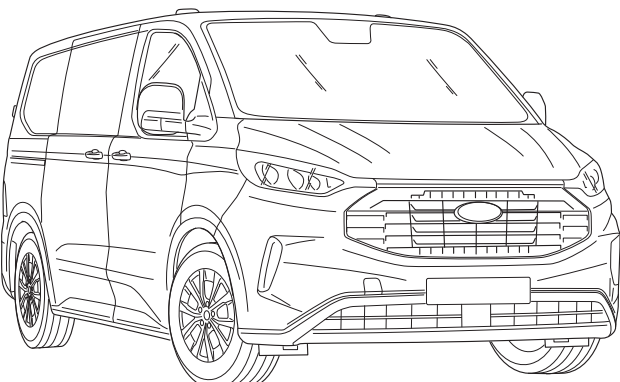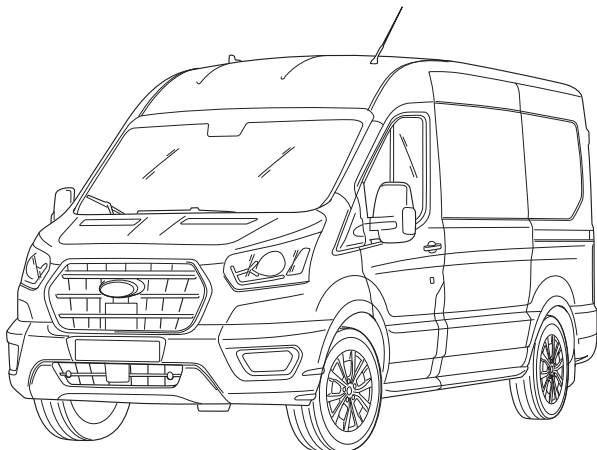



TRANSIT 09/2013 ➡

TRANSIT CUSTOM 07/2023 ➡

SKPZ3J-V463A07-AA		24/08/2023	1/7
-------------------	--	------------	-----

 EN Mirror image D Spiegelbild E Imagen simétrica F Image de miroir I Immagine dello specchio P Imagem do espelho NL Mirror beeid DK Spejlbilde N Speilbilde S Spiegelbild SF Pellikuva CZ Věrný obraz H Tükürlép PL Odbicie lustrzane GR εικόνακαθρεφτών TR Aynadaki görüntü RUS зеркальное отражение RO Imagine în oglindă	 EN Item Arrow D Pfeil “Komponente” E Flecha de artículo F Flèche d'élément I Freccia indicante oggetto P Seta indicadora de item NL Pijl “onderwerp” DK Pil – Punkt N Delpil S Komponentpil SF Kohteen nuoli CZ Šipka označující položku H Tételt jelző nyíl PL Strzałka wskazująca element GR Βέλος που υπδεικνύει ένα στεί TR Parça Oku RUS Стрелка на пункт RO Săgeată ce indică articolul	 EN Motion Arrow D Pfeil Bewegung E Flecha de movimiento F Flèche de déplacement I Freccia indicante movimento P Seta de movimento NL Pijl “beweging” DK Retningspil N Bevegelsespil S Rörelsepil SF Liikkeen nuoli CZ Šipka označující pohyb H Mozgás irányát jelző nyíl PL Strzałka wskazująca kierunek ruchu GR Βέλος που υπδεικνύει κίνηση TR Hareket oku RUS Стрелка направления движения RO Săgeată ce indică mișcarea	 EN Caution Symbol D Symbol “Vorsicht” E Símbolo de precaución F Symbole Attention I Simbolo di attenzione P Símbolo de Cuidado NL Symbol “waarschuwing” DK Symbol – Giv agt N Varselssymbol S Varningssymbol SF Varoitussymboli CZ Symbol výstrahy H Vigyázat szimbólum PL Ostrożnie GR Σύμβολο «Προσοή» TR Dikkat Sembolü RUS Знак «Внимание!» RO Simbol de atenționare
 EN Correct D Richtig E Correcto F Correct I Giusto P Certo NL Goed DK Rigtig N Riktig S Rätt SF Oikein CZ Správně H Helyes PL Prawidłowo GR Σωστ TR Doğru RUS Правильно RO Corect	 EN Tools Required D Benötigte Werkzeuge E Herramientas requeridas F Outils requis I Strumenti necessari P Ferramentas necessárias NL Benodigd gereedschap DK Nødvendige værktøjer N Nødvendig verktøy S Nödvändiga verktyg SF Tarvittavat työkalut CZ Potřebné nástroje H Szükséges szerszámok PL Potrzebne narzędzia GR Εργαλεία που απαιτούνται TR Gerekli Araçlar RUS Необходимые инструменты RO Unelte necesare		
2/7 SKPZ3J-V463A07-AA © Copyright Ford-Werke GmbH, 2023 			

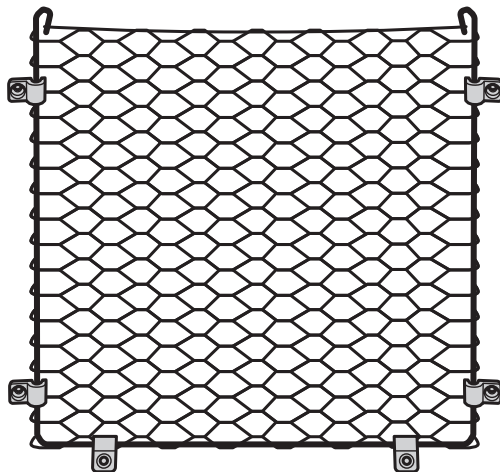A


2x

B



12x

C

Finis 1908904

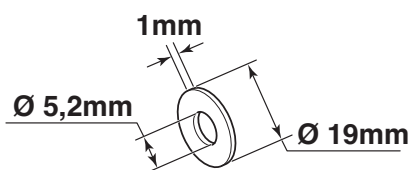



12x

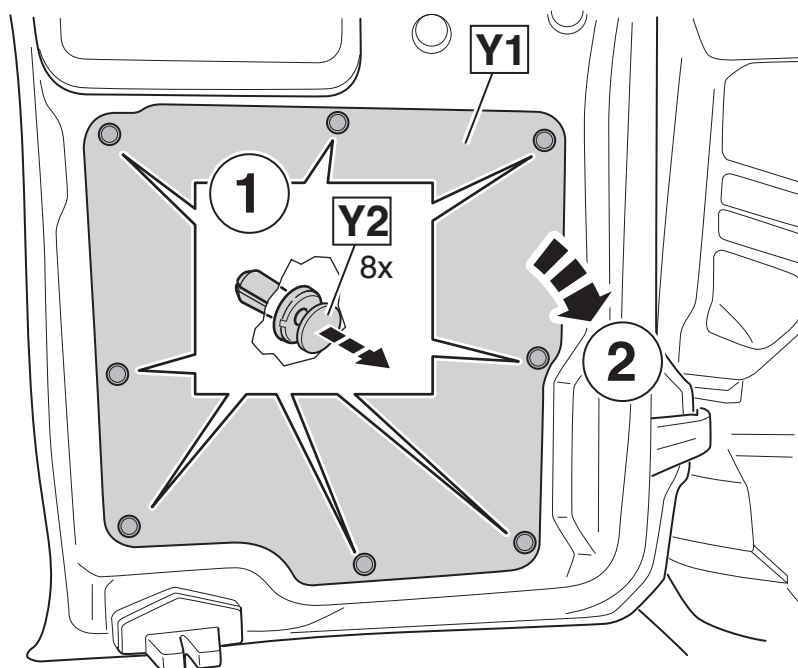**1**



SKPZ3J-V463A07-AA

© Copyright Ford-Werke GmbH, 2023

3/7

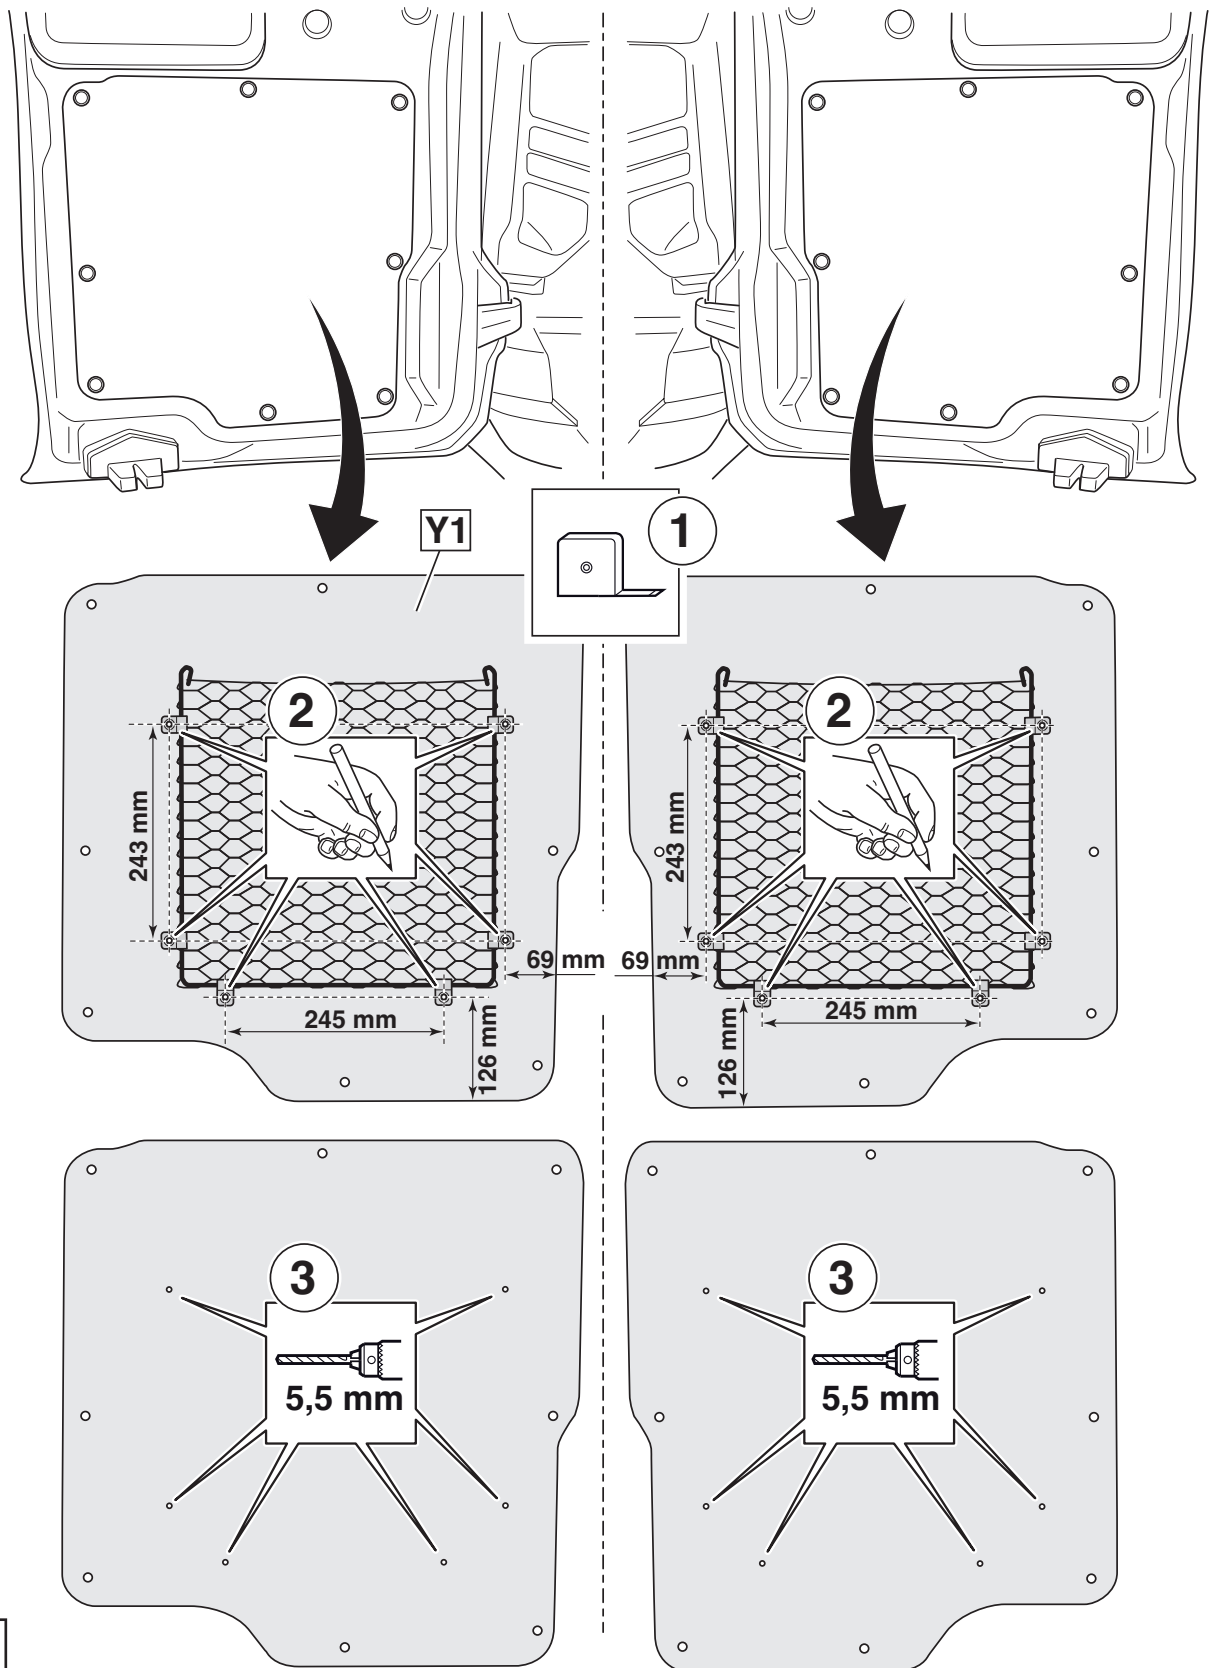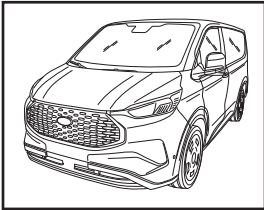

2

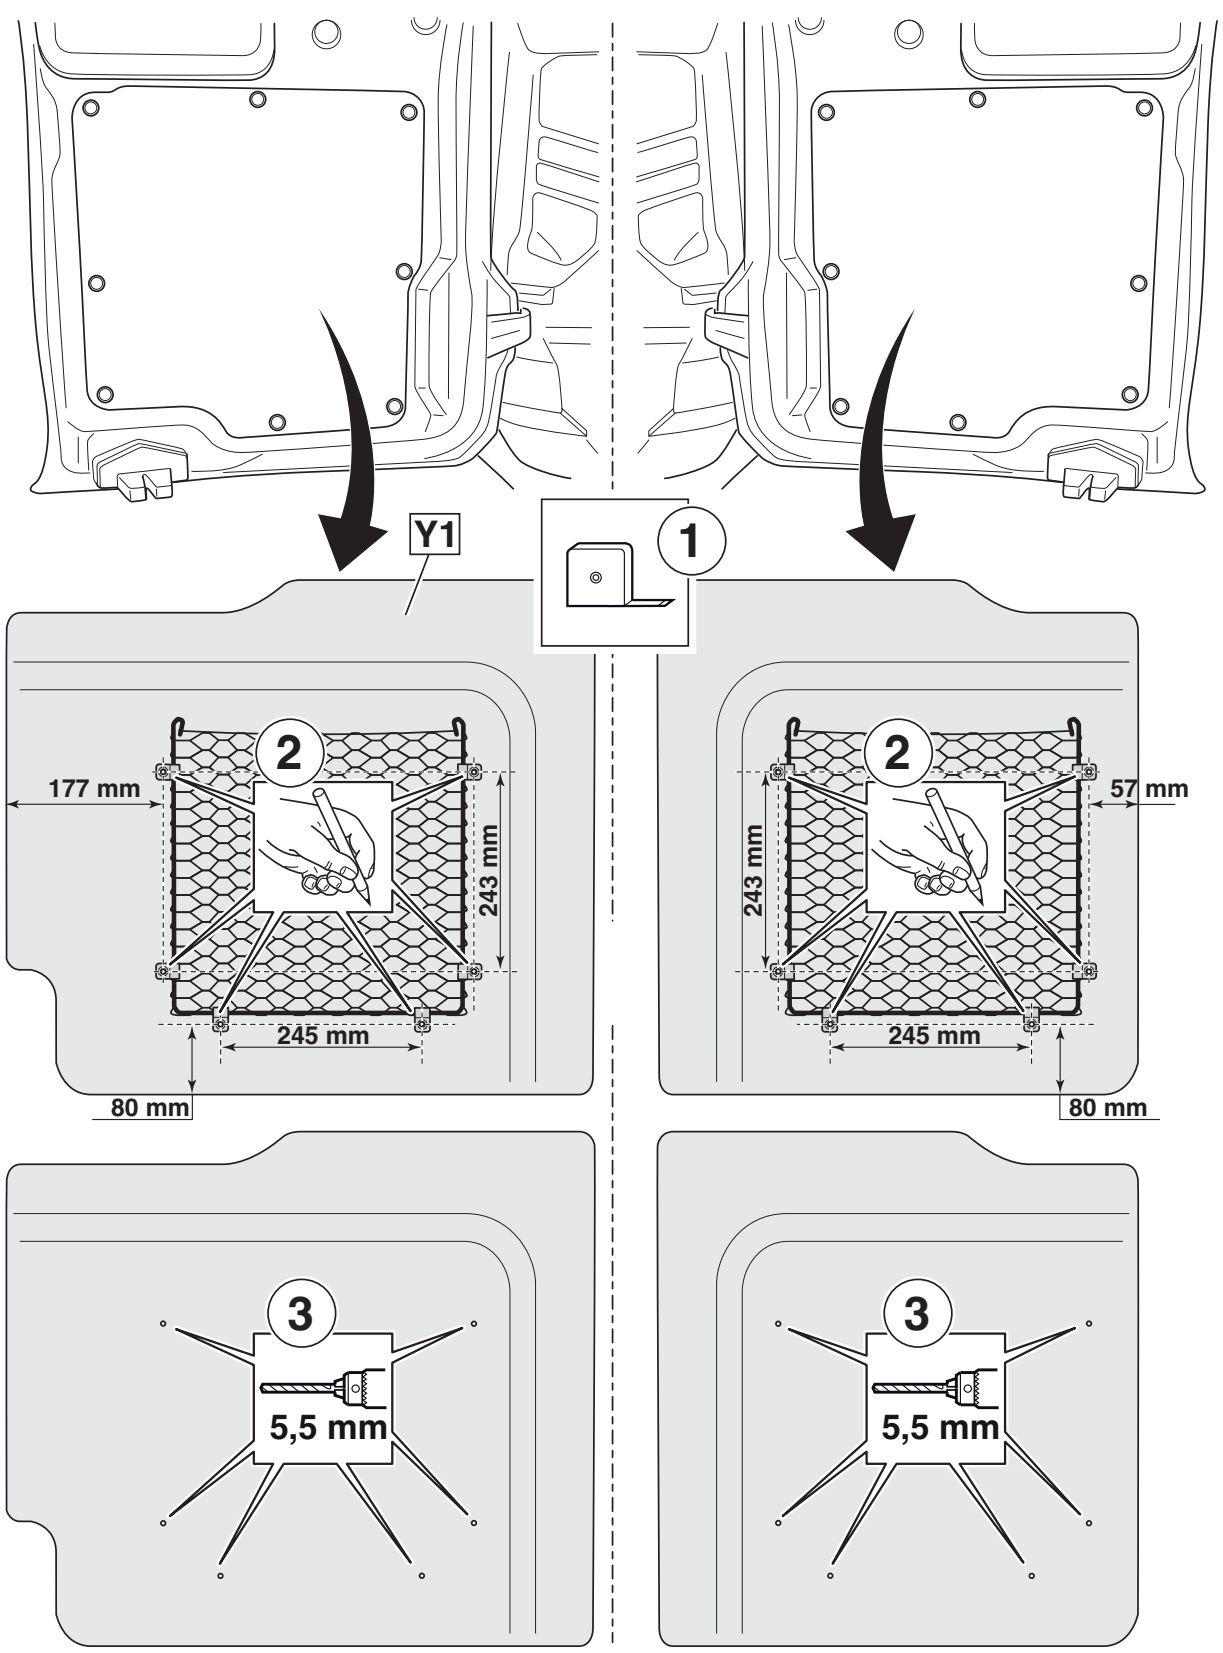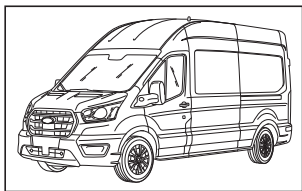



3






SKPZ3J-V463A07-AA

© Copyright Ford-Werke GmbH, 2023


5/7

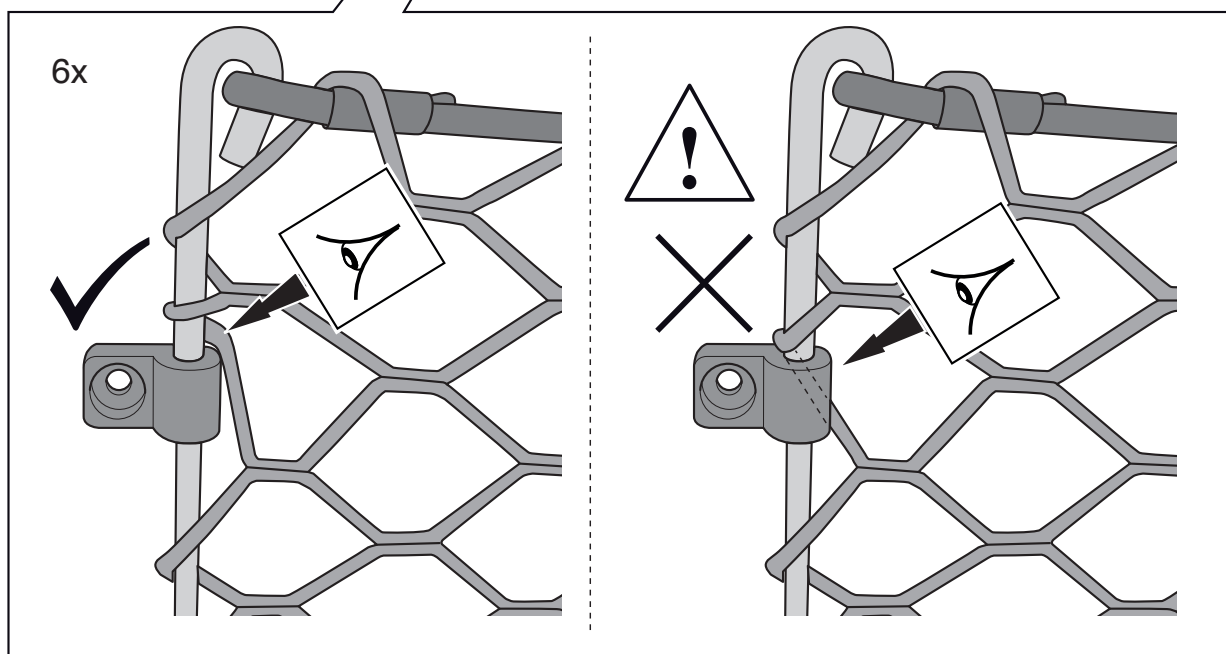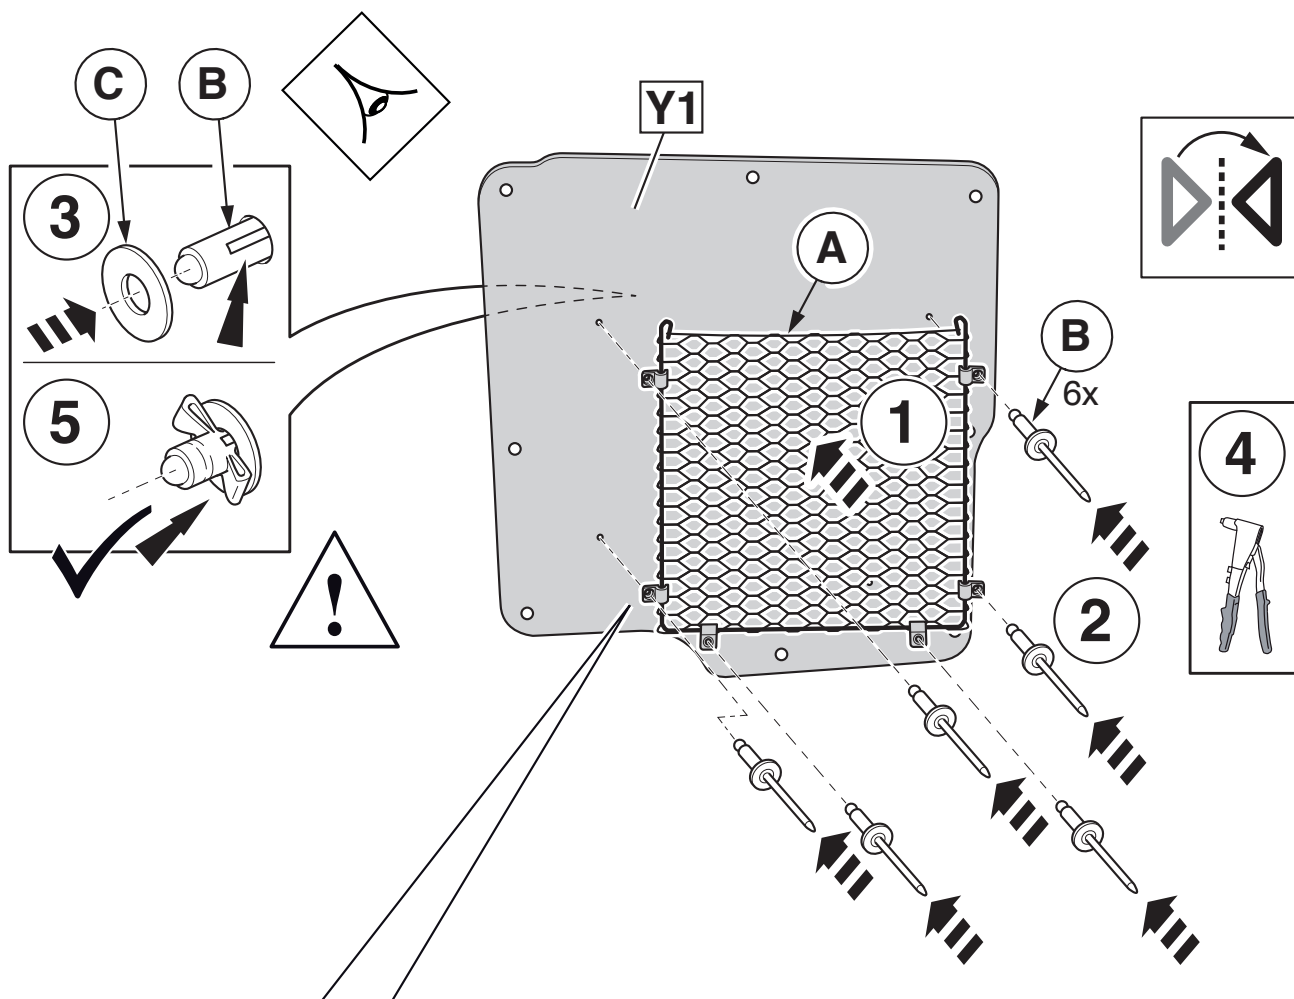

4

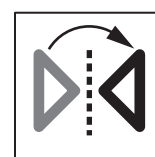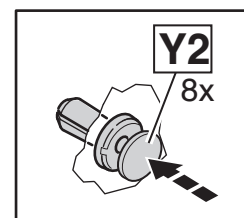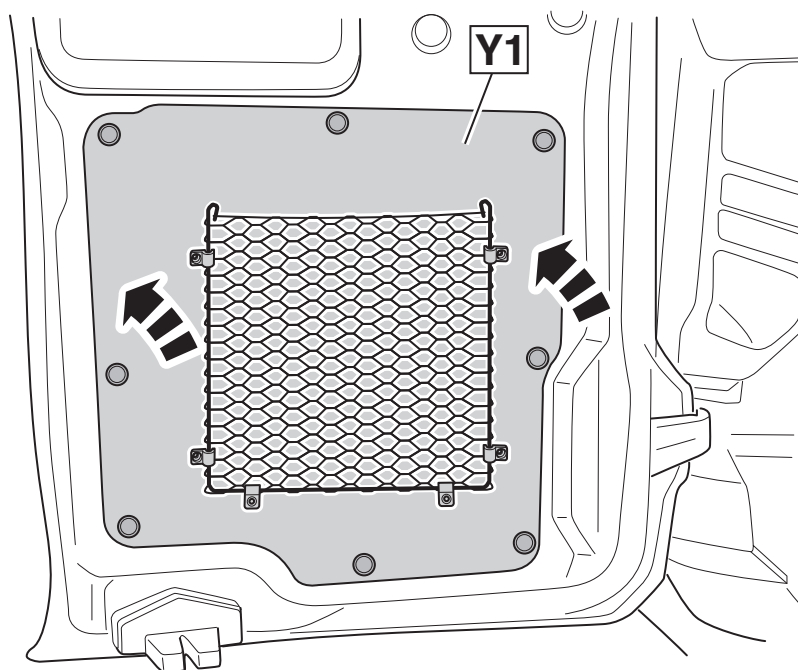

5

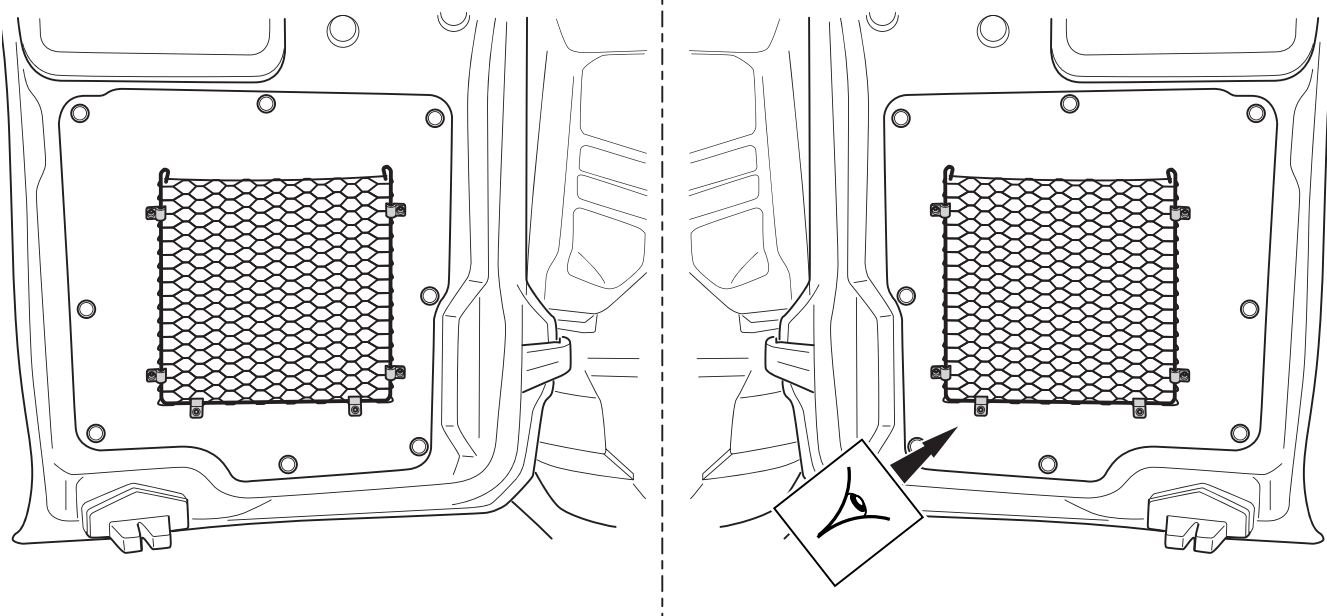

6



SKPZ3J-V463A07-AA

© Copyright Ford-Werke GmbH, 2023

7/7